



INSTALLATION MANUAL

Manual Brel Bi-Directional TDBU motor

BJE24TD

Read the manual before you begin the installation. If these instructions are not followed, this may lead to defects and injury in which warranty can't be claimed.



www.brel-home.com

Visit our website for more manuals and information



BJE24TD

Scan the QR code here for the manual to
download & view instructional videos



Table of Content

| | |
|--|---|
| Warning | 2 |
| Wiring/Installing the motor/Works with BREL HOME | 3 |
| Technical data of the motor/Reach/Charging the motor | 4 |
| Functions remote control | 5 |
| Settings | 5 |

Warning



Do not operate the motor in humid surroundings.



BREL-Motors declares that this motor has been manufactured according to the guidelines of the CE standard 1999/5/EC



The motor must be protected from direct moisture influences.



Keep the antenna in a good condition and do not shorten. The antenna should not come into contact with other metal parts otherwise it will reduce the function.




The motor must be installed correctly.



Do not allow children to play with the roller blind control unit. Keep remote controls out of reach of children. Children cannot recognize the dangers of electrical equipment and are therefore not allowed to work with it

Keep these instructions for future reference

Wiring

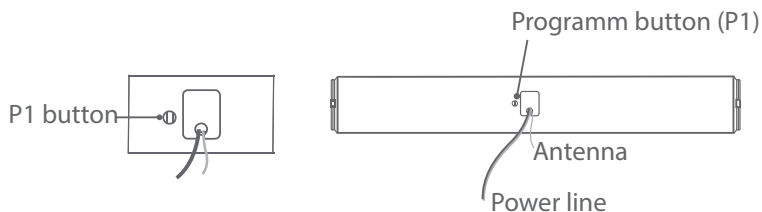

Installing the Motor



These assemblies are usually already done in the factory

Attach the crown and wheel to the motor and place the clip on the shaft of the motor so that the wheel is fixed to the motor.

Install the motor with the motorbracket on the product and take care that it is secured.

Place the motor in the tube of the roller/shutter.

Works with BREL HOME

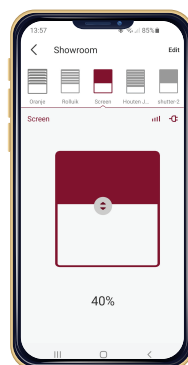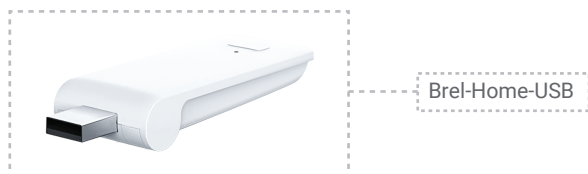

With the Brel-Home-USB you can control your motor with your Phone. You can make a time schedule and make scenario's. The Brel-Home-USB can be connected to Siri, Google Home and Alexa.

Technical data of the motor

BJE24TD

| | |
|------------------------|-----------|
| Motor Voltage | DC 12V |
| Radio frequency | 433.9 Mhz |
| Maximum Ampere Charger | 2 A |
| Power | 8.4 W |
| Torque | 0.6 Nm |
| Speed | 34 rpm |
| Amperage | 0.7 A |
| Moisture and Dust | IP 20 |

Storage capacity is up to 20 channels

Working temperature of the motor




Heavy Use: - 10°C tot +40°C
Normal Use: - 20°C tot +70°C

Reach

L1 = 100 meter

L2 = 20 meter

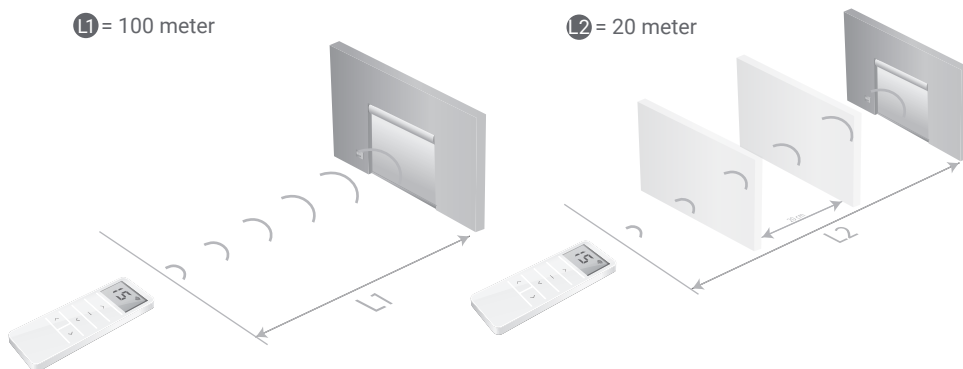

OUTDOOR

INDOOR


Charging the motor

The motor needs to be charged with a DC-212(EU), DC-213(UK) or DC-200 (US).

When the battery is empty the motor will beep 5 times.

When charging the motor the LED will blink red. When it is full the LED will be green continuously.

Functions Remote Control

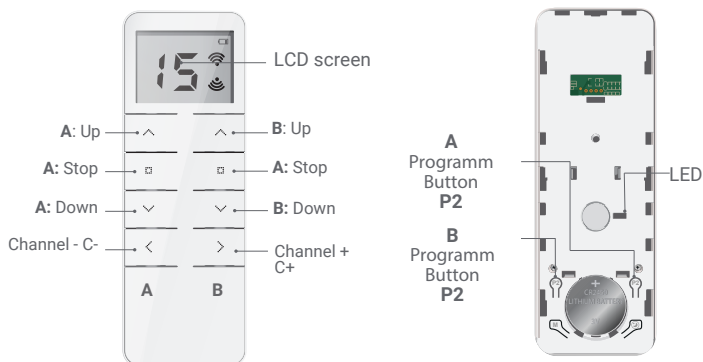

There are 2x P2 buttons, no matter which one you press.




BJE24TD

Scan the QR code here for the manual to download & view instructional videos

Step 1 Setting up the first remote/channel


- The remote control can transmit 15 channels and therefore control multiple blinds. First, select a channel for operating the relevant roller blind. Make sure that you select a free channel (we recommend only 1 product per channel).
- This remote has also channel 0. All blinds programmed in channel 1~15 are automatically programmed in this channel 0 and can be operated all at once.
- In case you have selected the wrong channel, go to **Resetting factory settings**.

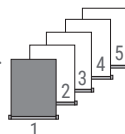

► **Select the desired channel.**

Step 2 Establishing connection


- In the procedures described here is a maximum interval of 10 seconds to complete each subsequent action: if you wait any longer, the system will leave the edit mode.
- Normally a button only needs to be pressed shortly. If you need to press and hold a button for several seconds this will be state clearly.
- The system will confirm each completed step with moving the blind up and down (↕).
- If a procedure does not play out as described, wait for 20 seconds and start again from the beginning of that step/procedure.

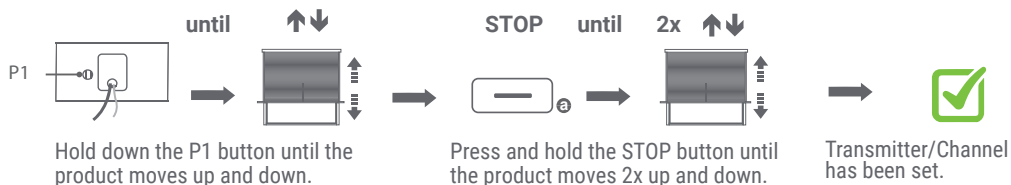

- If NO end positions are set, the product will move in the pulse / step operation. Go then to STEP 3. If end positions are set, the product will continue to its end position. Go then to STEP 5.
- WARNING:** It is possible that the correct end positions have not been set. Go then to OPTION A.

Step 3 Adjusting the direction of rotation *(Only if the direction of rotation is not correct)*

Only possible if no end positions are set.

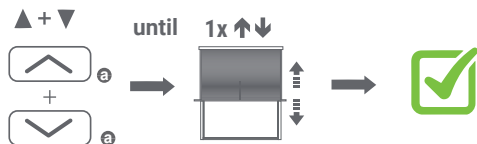

Press **UP** and **DOWN** button simultaneously, until the product moves.

The direction of rotation of the motor is **OK**.

Step 4 Setting the End Limits

- To move the motor one step: briefly press the **UP** or **DOWN** button
- To move the motor continuously: press the **UP** or **DOWN** button for 3 seconds (ATTENTION! Press **STOP** in time)

1. Set the desired top position



Use the operating buttons to move the product to the desired **TOP** position

Press **UP** and **STOP** simultaneously, until the product moves 2x.

The desired top position is set.

2. Set the desired bottom position



Use the operating buttons to move the product to the desired **BOTTOM** position.


Press **DOWN** and **STOP** simultaneously, until the product moves 2x.

The desired bottom position is set.

The roller blind is now ready for use.

If you are not satisfied with the result of setting the end positions, go to Option A - adjusting positions or **Resetting factory settings**.

Step 5 Setting the favorite position (If desired)

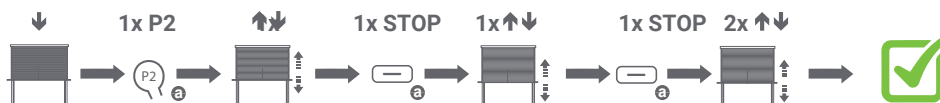

Go to the desired favorite position

Press 1x **P2** The product moves 1x up and down.

Press 1x **STOP** button. The product moves 1x up and down.

Press 1x **STOP** button. The product moves 2x up and down for confirmation.

Press and hold **STOP** for 3 seconds to move to the favorite position.

Repeat the steps above for the favorite bottom position (B).

Since the procedure is identical, to remove it repeat the steps.

Additional settings


Option A Adjusting the top position

 If adjustment is not possible, go to **Resetting factory settings**.

STOP+▲ until ↑↓



Press at the same time **STOP** and **UP** until the motor moves.

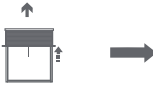

Go to the new top position.

STOP+▲ until ↑↓



Press at the same time **STOP** and **UP** button, until the motor 2x moves.




Adjusting the down position

 If adjustment is not possible, go to **Resetting factory settings**.

STOP+▼ until ↑↓



Press at the same time **STOP** and **DOWN** until the motor moves.

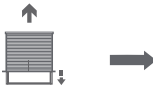

Go to the new bottom position.

STOP+▲ until ↑↓



Press at the same time **STOP** and **DOWN** button, until the motor 2x moves.



Option B Learn Extra transmitter/channel

Only possible when end limits are set.

a = Already existing transmitter/channel

b = New transmitter/channel

NOTE It is not possible to connect the DD116 or DD118 to a BJE24D motor

Method 1



Press **P2** of **a**. The product moves 1x up and down.



Press P2 of **a**. The product moves 1x up and down.



Press P2 of **b**. The product moves 2x up and down beeps 3x.



The transmitter **b** has been added.



 **Make sure the new transmitter is in the desired channel.**

 **To delete the transmitter / channel repeat the procedure.**

Method 2 (In case the old transmitter is lost or broken)




! To delete the transmitter / channel repeat the procedure.

Option C Pulse / jog control



Option D Speed Control

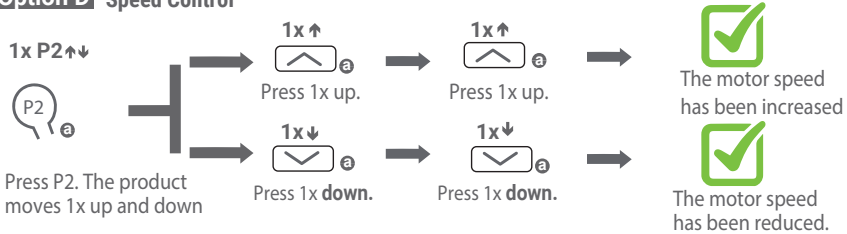


! If the motor does NOT react after this action, it is already at the highest or lowest speed.

! There are 3 different speeds; Namely : 26rpm - 30rpm - 34rpm.

! If the speed has been changed the slow stop is activated. To deactivate the slow stop you have to reset the motor.

Additional settings P1 button

Can be used without a transmitter as an operating button.

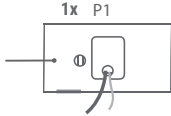


The product moves up, stops or goes down when pressed P1

Press 1x P1 on the motor.

Switching off the receiver


until

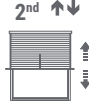


Press and hold P1 until the product moves up and down for the 2nd time.

The Receiver switched off.

To reactivate the receiver, briefly press P1 once.

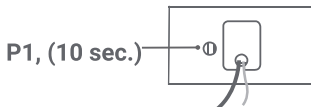
Changing the direction of rotation

until

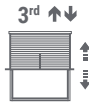

Press and hold P1 until the product moves up and down for the 3rd time.

The direction of rotation has changed.

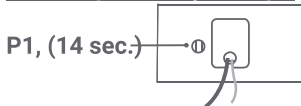Resetting to factory settings


until



Press and hold P1 until the product moves up and down for the 4th time.

Resets to factory settings.

To apply new settings: go to step 1

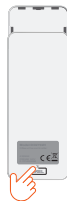Changing Batteries

Brel Netherlands B.V. is registered according to the transposition of Directive 2012/19EU (the WEEE Directive) and to the transposition of Directive 2006/66EC (the Battery Directive) at the Irish registry The Producer Register with the registration number 3408WB.