



BREL HOME

Wireless sun and wind meter



Table of contents

The installation

- Connecting the sun and wind meter to the motor
- Checking the direction of rotation
- Setting the values

Additional installation options

- Switching solar function off/on with the transmitter
- View set values
- Viewing current values

Removing the sun and wind meter

- Disabling the safety function
- Disconnecting the sun and wind meter

De installatie

Linking the sun and wind meter to the engine



Press the P2 key of the existing transmitter or channel once. The motor goes up and down. Press the P2 key of the existing transmitter or channel once more. The motor goes up and down. Then press 1x on the P2 key of the sun and wind meter. The motor goes up and down 2x. The sun and wind meter is now linked to the motor. Note! This is only possible if the end positions are set.

Checking the direction of rotation

Press UP once on the sun and wind meter. The sunshade should now close. Is the direction of rotation incorrect? Then change the direction of rotation according to the manual of the respective motor.

Setting values

Press any key to activate the display if it is switched off.

Press the M key for 3 sec,
until the sun value in
the display flashes.



Increase the value with UP
to the desired sun intensity.
(With A decrease the value)



De installatie

Briefly press the M key once.
The sun value is now confirmed and
the wind value starts flashing.



Increase the value with UP
to the desired wind intensity.
(Use A to decrease the value)



The intensity can be set as you wish. Below is a
guideline.

* If the sun and wind meter measures the set sun intensity for 5 minutes, the product goes down. If the sun
intensity is below the set value for more than 15 minutes, the product goes back up.

* If the sun and wind meter measures the set wind intensity, the product goes up within 15 sec.

Sun and wind intensity

The intensity can be set as you wish. Below is a
guideline for sun and wind intensity.

Sun intensity

20 Klux
40 Klux
60 Klux
80 Klux
80+ Klux

Daylight / indirect sunlight
Very bright daylight
Bright daylight
Very bright daylight
Direct sunlight

Wind intensity

10 km/h
20 km/h
30 km/h
40 km/h
40+ km/h

Weak
Moderate
Strong
Very strong
Strong / stormy

Additional options

Switching solar function off/on with the transmitter



Press the P2 key of the existing transmitter or channel once. The motor goes up and down. Press the P2 key of the existing transmitter or channel once more. The motor goes up and down. Then press the UP key 1x. The motor goes up and down 2x.

1x pulse 1x long beep = Sun function off

2x pulse 3x short beep = Sun function on

Viewing the set values

Press M once on the sun and wind meter. The set sun value comes into view. Press M once more. The set wind value appears in the display. Press M once more to return to the home screen.

Viewing the current values

Press A once on the sun and wind meter. The current sun value comes into view. Press A once more. The current wind value appears in the display. Press A once more to alternately display the current values.

Removal of the sun and wind meter

Deactivate safety function



Press the P2 key once. The motor goes up and down. Press the UP key 1x. The motor goes up and down. Press 1x on the STOP key. The motor goes up and down. The safety function of the sun and wind meter is now deactivated.

Disconnecting the sun and wind meter



Press the P2 key of the existing transmitter or channel once. The motor goes up and down. Press the P2 key of the existing transmitter or channel once more. The motor goes up and down. Then press 1x on the P2 key of the sun and wind meter. The motor goes up and down 2x. The sun and wind meter is now disconnected from the motor.



BREL HOME

Voltastraat 86
7006 RW
Doetinchem
info@brel-home.com
0314-680448