



INSTALLATION MANUAL

Manual Brel Bi-Directional Rollerblind motor

BLE15

Read the manual before you begin the installation. If these instructions are not followed, this may lead to defects and injury in which warranty can't be claimed.



www.brel-home.com

Visit our website for more manuals and information



BLE15-0.3

Scan the QR code here for the manual to
download & view instructional videos



Table of Content

Warning	2
Wiring/Installing the motor/Compatible with hub	3
Technical data of the motor/Reach/Charging the motor	4
Functions remote control	5
Settings	5

Warning



Do not operate the motor in humid surroundings.



BREL-Motors declares that this motor has been manufactured according to the guidelines of the CE standard 1999/5/EC



The motor must be protected from direct moisture influences.



Keep the antenna in a good condition and do not shorten. The antenna should not come into contact with other metal parts otherwise it will reduce the function.



The motor must be installed correctly.



Do not allow children to play with the roller blind control unit. Keep remote controls out of reach of children. Children cannot recognize the dangers of electrical equipment and are therefore not allowed to work with it

Keep these instructions for future reference

Wiring



Installing the Motor


These assemblies are usually already done in the factory

Attach the crown and wheel to the motor and place the clip on the shaft of the motor so that the wheel is fixed to the motor.

Install the motor with the motorbracket on the product and take care that it is secured.

Place the motor in the tube of the roller/shutter.

Works with BREL HOME USB

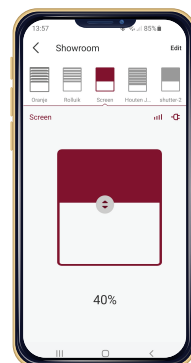

With the Brel-Home-USB you can control your motor with your Phone. You can make a time schedule and make scenario's. The Brel-Home-USB can be connected to Siri, Google Home and Alexa.

Technical data of the motor

TYPE BLE15-0.3

Motor Voltage	DC 8V
Charge Voltage	DC 5V
Maximum Ampere Charger	2 A
Power	5 W
Torque	0.3 Nm
Speed	20-25-30 rpm
Amperage	0.6 A
Moisture and Dust	IP20

Storage capacity is up to 20 channels

Working temperature of the motor




Heavy Use:
-20°C tot +70°C

Normal Use:
-10°C tot +40°C

Reach

L1 = 100 meter

L2 = 25 meter

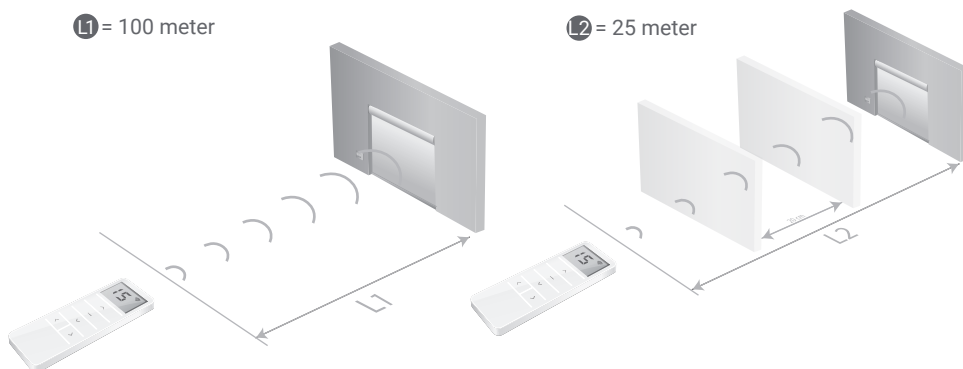


Charging the motor

If charging the BLE15 only use a charger with Micro-USB plug (5V)

The battery is empty when the motor light flashes red. The light flashes green while charging.

The battery is fully charged when the light stops blinking and lights-up continuously.

Functions Remote Control

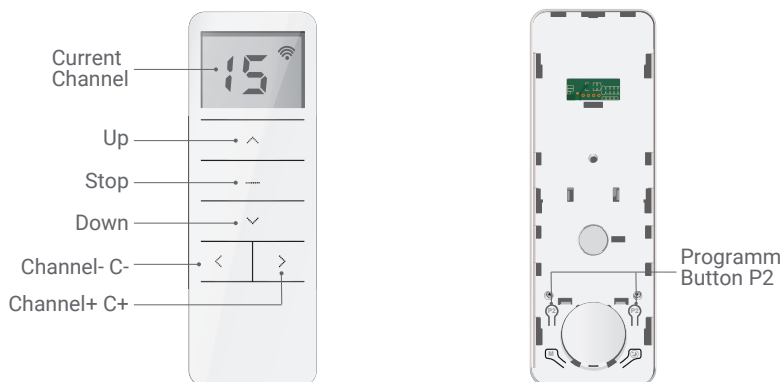

There are 2x P2 buttons, no matter which one you press.




Scan the QR code here for the manual to download & view instructional videos

BLE15-0.3

Step 1 Setting up the first remote/channel


- The remote control can transmit 15 channels and therefore control multiple blinds. First, select a channel for operating the relevant roller blind. Make sure that you select a free channel (we recommend only 1 product per channel).
- This remote has also channel 0. All blinds programmed in channel 1~15 are automatically programmed in this channel 0 and can be operated all at once.
- In case you have selected the wrong channel, go to **Resetting factory settings**.

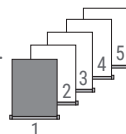

► **Select the desired channel.**

Step 2 Establishing connection


- In the procedures described here is a maximum interval of 10 seconds to complete each subsequent action: if you wait any longer, the system will leave the edit mode.
- Normally a button only needs to be pressed shortly. If you need to press and hold a button for several seconds this will be state clearly.
- The system will confirm each completed step with moving the blind up and down (↕).
- If a procedure does not play out as described, wait for 20 seconds and start again from the beginning of that step/procedure.

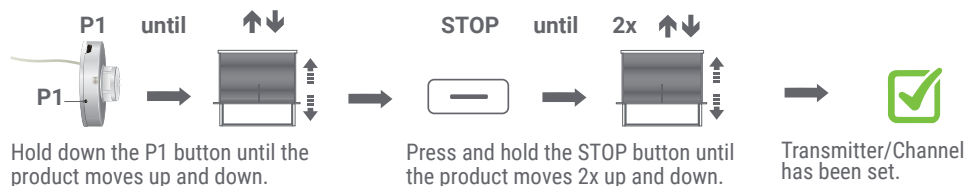

- If NO end positions are set, the product will move in the pulse / step operation. Go then to STEP 3.
- If end positions are set, the product will continue to its end position. Go then to STEP 5.
- WARNING:** It is possible that the correct end positions have not been set. Go then to OPTION A.

Step 3 Adjusting the direction of rotation *(Only if the direction of rotation is not correct)*

Only possible if no end positions are set.

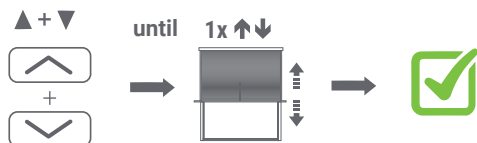

Press **UP** and **DOWN** button simultaneously, until the product moves.

The direction of rotation of the motor is **OK**.

Step 4 Setting the End Limits

To move the motor one step: briefly press the **UP** or **DOWN** button

To move the motor continuously: press the **UP** or **DOWN** button for 3 seconds (ATTENTION! Press **STOP** in time)

1. Set the desired top position



Use the operating buttons to move the product to the desired **TOP** position

Press **UP** and **STOP** simultaneously, until the product moves 2x.

The desired top position is set.

2. Set the desired bottom position



Use the operating buttons to move the product to the desired **BOTTOM** position.


Press **DOWN** and **STOP** simultaneously, until the product moves 2x.

The desired bottom position is set.

The roller blind is now ready for use.

If you are not satisfied with the result of setting the end positions, go to Option A - adjusting positions or **Resetting factory settings**.

Step 5 Setting the favorite position (If desired)

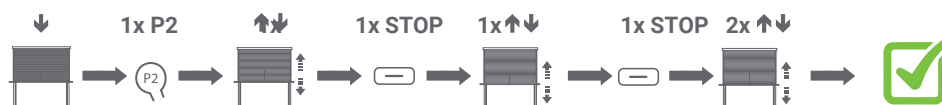

Go to the desired favorite position

Press 1x **P2** The product moves 1x up and down.

Press 1x **STOP** button. The product moves 1x up and down.

Press 1x **STOP** button. The product moves 2x up and down for confirmation.

Press and hold **STOP** for 3 seconds to move to the favorite position.

Since the procedure is identical, to remove it repeat the steps.

Additional settings

Option A Adjusting the top position

 If adjustment is not possible, go to **Resetting factory settings**.

STOP +  **until** 



STOP +  **until 2x** 



Press at the same time **STOP** and **UP** until the motor moves up and beeps 1 times.

Go to the new top position.

Press at the same time **STOP** and **UP** button, until the motor 2x moves and beeps 3 times.

Adjusting the down position

 If adjustment is not possible, go to **Resetting factory settings**.

STOP +  **until** 



STOP +  **until 2x** 



Press at the same time **STOP** and **DOWN** until the motor moves and beeps 1 times.

Go to the new bottom position.

Press at the same time **STOP** and **DOWN** button, until the motor 2x moves and beeps 3 times.

Option B Learn Extra transmitter/channel

Only possible when end limits are set.

a = Already existing transmitter/channel

b = New transmitter/channel

NOTE It is not possible to connect the DD116 or DD118 to a BLE 15 motor

Method 1

P2 a



P2 a



P2 b




Press **P2 of a**. The product moves 1x up and down and beeps 1 times.

Press **P2 of a**. The product moves 1x up and down and beeps 1 times.

Press **P2 of b**. The product moves 2x up and down beeps 3x and beeps 3 times.

The transmitter **b** has been added.

 **Make sure the new transmitter is in the desired channel.**

 **To remove the emitter/channel repeat the same procedure.**

Method 2 (In case the old transmitter is lost or broken)

P1 a



until



STOP b



until

2x 



Press **P1 of a**. The product moves 1x up and down and beeps 1 times.

Press **1x STOP of b**. The product moves 2x up and down and beeps 3 times.

The new transmitter **b** has been added.

 **To remove the emitter/channel repeat the same procedure.**

Option C Pulse / jog control



until



1x 

1x **STOP**



1x  and beeps 1 times

Pulse / jog on


Pulse / jog off

2x  and beeps 3 times

Press and hold **UP** and **DOWN** button, until the product moves up and down.

Press 1x **STOP** button.

Option D Speed Control

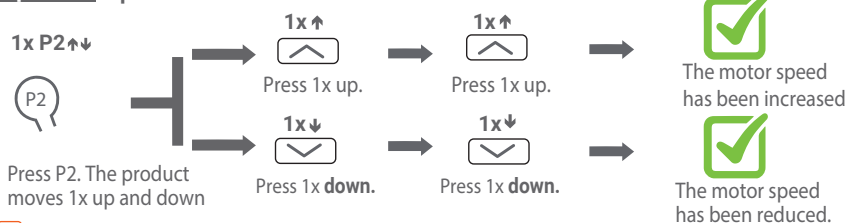

 If the motor does NOT react after this action, it is already at the highest or lowest speed.

 There are 3 different speeds; Namely : 30rpm - 25rpm - 20rpm.

 If the speed has been changed the slow stop is activated. To deactivate the slow stop you have to reset the motor.

Additional settings P1 button


Can be used without a transmitter as an operating button.




The product moves up, stops or goes down when pressed P1

Press 1x **P1** on the motor.


Switching off the receiver

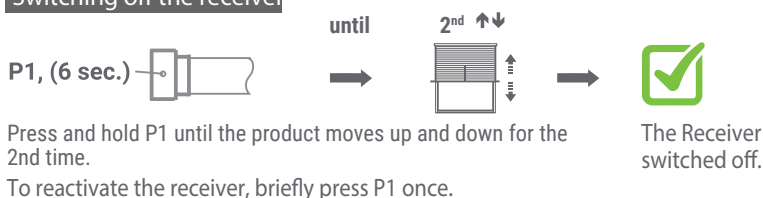

Changing the direction of rotation

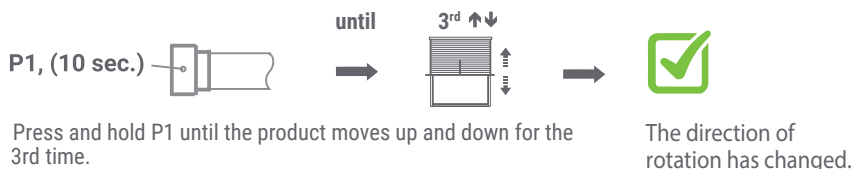

Resetting to factory settings

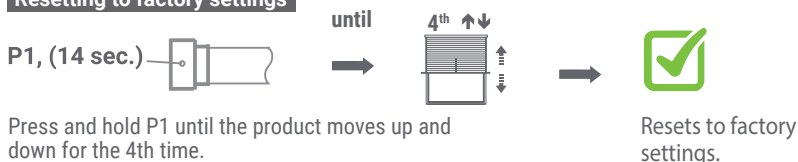

 To apply new settings: go to step 1

Changing Batteries



Brel Netherlands B.V. is registered according to the transposition of Directive 2012/19EU (the WEEE Directive) and to the transposition of Directive 2006/66EC (the Battery Directive) at the Irish registry The Producer Register with the registration number 3408WB.