

# REVO M-1PH 35A - 40A

## Universal Unit



### General Description

- Revo M has been specifically designed to be an Universal Unit
- RS485 Comm. MODBUS Protocol Standard
- Frontal Key Pad to configure the unit and to read V,I and Power
- Configurability via RS485, USB Port and frontal Key Pad
- Microprocessor based electronic circuit fully isolated from power
- Universal input signal: RS485,Pot, Analog and SSR
- Universal Firing Mode: Soft Start + Phase Angle, Delayed Triggering Firing, Single Cycle, Burst Firing
- Configurable Control Mode: V, I, V<sup>2</sup> and VxI
- Heater Break alarm to diagnose partial or total load failure and Thyristor Short circuit
- Digital input configurable
- Fuse and Fuse Holder Standard
- Current transformer integrated in Fuse Holder
- Comply with EMC, cUL pending
- IP20 Protection
- DIN RAIL mounting

### TECHNICAL SPECIFICATION

<b>Voltage power supply</b>	From 24V to 480V Max (Std) or 600V on request		
<b>Voltage Frequency</b>	50 or 60 Hz no setting needed from 47 to 70 Hz		
<b>Nominal Current</b>	35A, 40A		
<b>Input Signal</b>	SSR (logic)	4:30Vdc	5mA Max (On ≥ 4Vdc Off ≤ 1Vdc);
	Voltage input	0:10Vdc	impedance 15 K ohm;
	Current input	0:20/4:20mA	impedance 100 Ohm;
<b>Digital input</b>	4:30V dc 5 mA Max (On > 4Vdc Off < 1Vdc)		
<b>Firing</b>	Soft Start + Phase Angle, Delay Triggering + Burst Firing, Soft Start + Burst Firing, Single Cycle, Selectable from frontal Key-Pad or via RS485.		
<b>Control Mode</b>	Voltage, Current, Square Voltage and Power selectable via frontal Key Pad, and RS485 or via Digital input to transfer from one control mode to another one to establish a control strategy		
<b>Auxiliary Voltage Supply</b>	90:130Vac 8VA Max   170:265Vac 8VA Max (Standard)   230:345Vac 8VA Max   300:530Vac 8VA Max (Standard) 510:690Vac 8VA Max		
<b>Heater Break Alarm</b>	HB alarm setting on front unit or RS485 with possibility to set sensitivity. Relay output 0,5A at 110V		
<b>Mounting</b>	DIN RAIL Mounting or Panel Mounting		
<b>Operating Temperature</b>	40 °C without derating. Over this temperature see below derating curve		
<b>Storage temperature</b>	-25 °C to 70 °C Max		
<b>Altitude</b>	Over 1000 m of altitude reduce the nominal current of 2% for each 100m		
<b>Humidity</b>	From 5 to 95% without condense and ice		

## OPTION'S FEATURES AND SPECIAL DETAILS

### HEATER BREAK ALARM (HB)

#### ON FRONT CABINET



FEW MINUTES TO SET AND CALIBRATE ALL THE UNITS


The Heater Break circuit diagnostic partial or total load failure. It reads load resistance with an internal voltage transducer and current transformer to calculate the resistance value  $V/I$  circuit is compensated for voltage fluctuation, in fact a voltage variation has no influence on resistance value because  $V/I$  ratio remain constant.

On this unit is possible to set the nominal resistance value and the alarm sensitivity.

HB alarm in addition diagnostic the thyristor in short circuit

A normally open contact gives the alarm condition and an indication of the alarm type appears on display.


### BURST FIRING

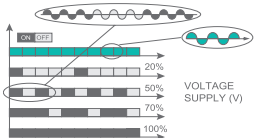

This firing is performed digitally within the thyristor unit at zero volts, producing no EMC interference.


Analogue input is necessary for BF and the number of complete cycles must be specified for 50% power demand. This value can be between 1 and 255 complete cycles, determining the speed of firing. When 1 is specified, the firing mode becomes Single Cycle (SC).

### PHASE ANGLE PA

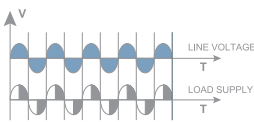

PA controls the power to the load by allowing the thyristor to conduct for part of the AC supply cycle only. The more power required, the more the conduction angle is advanced until virtually the whole cycle is conducting for 100% power. The load power can be adjusted from 0 to 100% as a function of the analogue input signal, normally determined by a temperature controller or potentiometer, PA is normally used with inductive loads.

### DELAYED TRIGGERING DT



Used to switch the primary coil of transformers when coupled with normal resistive loads (not cold resistance) on the secondary, DT prevents the inrush current when zero voltage (ON-OFF) is used to switch the primary. The thyristor unit switches OFF when the load voltage is negative and switches ON only when positive with a pre-set delay for the first half cycle.

### CD EASY



This is a memory support tool that can be used by maintenance personnel on shop floor.

The user can copy the configuration of one unit and paste it into another. CD EASY is very simple with one push button to upload the configuration (Read and another to download the stored configuration (Write)

This tool can be used with our Remote service to mail the working configuration via internet.

### FIELD BUS MODULE



CD-RS Used to convert RS232 to RS422

TU-RS485-PDP Used to convert RS485 Modbus to Profibus DP


TU-RS485-DNE Used to convert RS485 Modbus to Devicenet

TU-RS485-ETH Used to convert RS485 Modbus to Ethernet

TU-RS485-CAN Used to convert RS485 Modbus to CAN

For more informations see „Field Bus Module“ Bulletin

### POWER SCALING

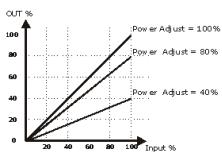


It's a scaling factor of the input command signal and limit the output of Thyristor unit. This parameter can be adjusted from 1 to 99% via RS485 or by the front of the unit If this parameter is setted at 50% and the input signal is 100% the output become 50%. This feature is very useful to reduce the power when a zone has been oversized or when a temperature controller gives same reference to more unit along a furnace. Imagine 3 zones with left and right one close to the door where in a continuous furnace the material come into and flow out. The profile of temperature along furnace is higher in central zone because there is less dispersion but if we scale its input we can have a flat profile.

### APPLICATIONS AND FOCUS ON:


- Infrared lamp.
- Fournaces.
- Petrochemical
- Dryers
- Pharmaceutical
- Autoclaves.
- Chemical
- Extrusion line.
- Climatic chambers

# WIRING CONNECTION REVO M 1PH FROM 30A TO 40A

## REVO M 1PH FROM 30A TO 40A

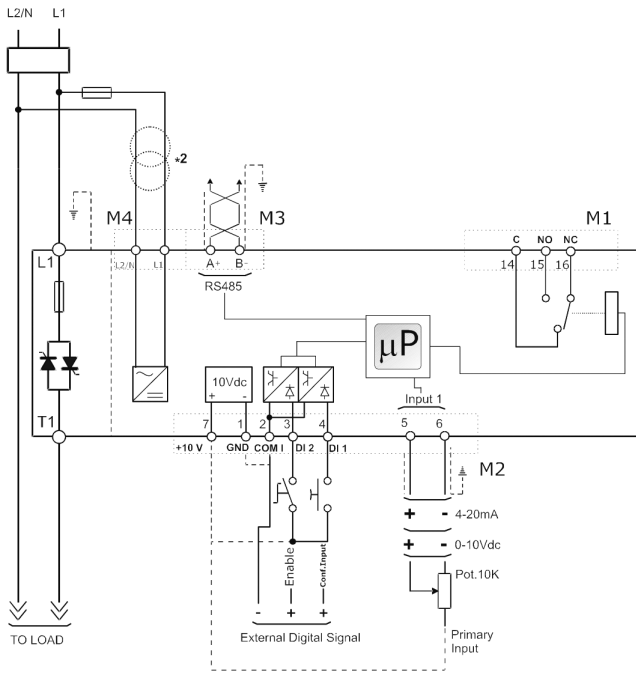


### LOAD TYPE

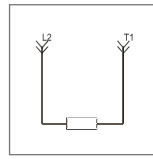

Resistance and Infrared Lamps  
Long and medium waves

### LOAD TYPE

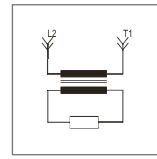


Use Delayed Triggering for transformers coupled with Normal resistance

### NOTE



- (1) • The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor I<sub>t</sub> should be 20% less than power controller I<sub>t</sub>. Semiconductor fuses are classified for UL as supplementar protection for semiconductor. They are note approved for branch circuit protection.
- (2) • The auxiliary voltage supply of the Revo unit must be synchronized with load voltage supply. If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage (to the load), use an external transformer connected as above.

## DIMENSION AND FIXING HOLES

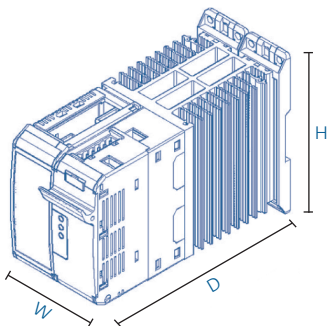

SR9 W 72 mm. - H 121 mm. - D 185 mm. - kg. 1,15

REVO M 35A - 40A

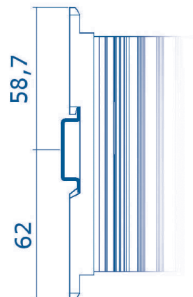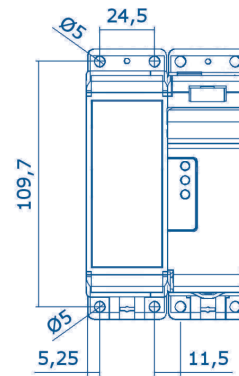

## OUTPUT FEATURES (POWER DEVICE)

<b>Nominal current in continuous service:</b>	35A, 40A
<b>Max peak current (10ms)</b>	600A for unit type 035   800A for unit type 040
<b>Voltage range:</b>	24÷600V
<b>Repetitive peak reverse voltage:</b>	1200V (480V), 1600V (600V)
<b>Latching current:</b>	250mA
<b>Leakage current:</b>	15mA eff
<b>I<sup>t</sup> value tp=10msec:</b>	1750A <sup>2</sup> /S for unit type 035   3110A <sup>2</sup> /S for unit type 040
<b>Frequency range:</b>	47÷70Hz
<b>Power loss (I=Inom):</b>	44W for unit type 035   50W for unit type 040
<b>Isolation Voltage:</b>	2500Vac

Note (3)

## ORDERING CODES REVO M 1PH

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
<b>REVO M - 1 PH</b>	<b>R</b>	<b>M</b>	<b>1</b>	-	-	-	-	-	-	-	-	-	-	-	-	-

4,5,6 Current	
Description code	Numeric code
35A	035
40A	040

7 Max Voltage	
Description code	Numeric code
480V	4
600V	6

8 Aux. Voltage supply (1)	
Description code	Numeric code
90:130V (4)	1
170:265V (4)	2
230:345V (4)	3
300:530V (4)	5
510:690V (4)	6

9 Input	
Description code	Numeric code
SSR	S
0:10V dc	V
4:20mA	A
10kPot	K
RS485	R

10 Firing	
Description code	Numeric code
Zero Crossing ZC	Z
Single Cycle SC	C
Burst Firing BF	B
Soft Start + Burst Firing S+BF	J
Delayed Triggering + Burst Firing DT+BF	D
Phase Angle PA	P
Soft Start + Phase Angle S+PA	E

11 Control Mode	
Description code	Numeric code
Open Loop	O
Voltage Feed Back V	U
Power Feed Back VxI	W
Voltage Square f/b V <sup>2</sup>	Q
Current Feed Back I	I

12 Fuse & Option	
Description code	Numeric code
Fuse + Fuse Holder	Y
Fuse + Fuse Holder +CT +HB	H

13 Fan Voltage	
Description code	Numeric code
No Fan	0

14 Approvals	
Description code	Numeric code
CE EMC For European Market	0
cUL For American Market, Pending	L

15 Manual	
Description code	Numeric code
None	0
Italian Manual	1
English Manual	2
German Manual	3
French Manual	4

16 Version	
Description code	Numeric code
Std version with one fuse+ Fuse Holder	1
Second fuse used with Phase to Phase voltage Supply for unit (1)	2
Second fuse + additional safety relay (2)	3

LEGEND  
CT = Current Transformer  
HB = Heater Break Alarm

- Note (1): If you need one REVO M 1PH with 2 Fuse & Fuse Holder  
For dimensions see REVO M 2PH.  
Note (2): If you need one REVO M 1PH with 2 Fuse & Fuse Holder + safety relay  
For dimensions see REVO M 2PH.  
Note (3): After 16th digit write current and voltage of load inside brackets Ex. (40A-400V)  
Note (4): Load voltage must be included in Selected Auxiliary Voltage Range

**WEST**  
Control Solutions

WEST Control Solutions your global partner for temperature and process control

### Austria

PMA Prozeß- und Maschinen-Automation GmbH  
Liebermannstraße Fo1 · 2345 Brunn am Gebirge  
Tel.: +43 (0)2236 691-121 · Fax: +43 (0)2236 691-102  
info@pma-online.at

### Germany

PMA Prozeß- und Maschinen-Automation GmbH  
Miramstraße 87 · 34123 Kassel  
Tel.: +49 (0)561 505-1307 · Fax: +49 (0)561 505-1710  
mailbox@pma-online.de

Brochures and datasheets are available for the complete range of WEST Control Solutions products, contact your local sales office for more information or visit our website at [www.west-cs.com](http://www.west-cs.com)

### China

Danaher Setra-ICG  
Tianjin Co. · Ltd. No. 28 Wei 5 Road  
The Micro-Electronic Industry Park TEDA  
Xiqing District · Tianjin 300385  
Tel.: +86 22 8398 8098 · Fax: +86 22 8398 8099  
Sales Hotline: +86 400 666 1802  
tc.sales@danaher.com

### United Kingdom

West Control Solutions  
The Hyde Business Park  
Brighton · East Sussex · BN2 4JU  
Tel.: +44 (0)1273 606271 · Fax: +44 (0)1273 609990  
info@westinstruments.com

### USA

West Control Solutions  
1675 Delany Road · Gurnee · IL 60031-1282  
Tel.: 800 866 6659 · Fax: 847 782 5223  
custserv.west@dancon.com

### France

Hengstler SA · 69 Rue de la Belle Etoile  
Bat D - ZI Paris Nord II · 95700 Roissy  
Tel.: +33 (1) 77 80 90 40 · Fax: +33 (1) 77 80 90 50  
info@westinstruments.com



**WEST** **CALE** **Partlow**

BR-EC-2-US-0310