

AG24

Actuator with ETHERNET **POWERLINK** interface

User manual



Table of contents

1	General Information.....	9
1.1	Documentation.....	9
2	Display and control keys.....	9
2.1	LCD display.....	9
2.2	LED display.....	10
2.2.1	Status LED..1.....	10
2.2.2	Status LED..2.....	10
2.2.3	BE Error LED..4.....	10
2.2.4	Link/Activity LED 5,..6.....	11
2.2.5	BS Status LED..7.....	11
2.3	Control keys.....	11
2.3.1	Key lock and enable time.....	12
2.3.2	Value input.....	12
2.3.3	Value selection.....	12
2.4	Menu control.....	13
2.4.1	Menu selection.....	13
2.4.2	Changeable parameters menu.....	14
2.4.2.1	PCM menu.....	14
2.4.3	Readable parameters menu.....	14
2.4.4	Error memory menu.....	15
3	Functional description.....	15
3.1	User units.....	15
3.1.1	Example of spindle drive.....	16
3.1.2	Example of toothed rod/pinion, straight toothing, metric division.....	16
3.1.3	Example external gear.....	16
3.2	Protective functions.....	17
3.2.1	Current limiting.....	17
3.2.2	I2t monitoring.....	17
3.2.3	Temperature monitoring.....	17
3.2.4	Overtoltage protection with energetic recovery.....	17
3.2.5	Contouring error monitoring.....	18
3.3	Warnings / Errors.....	18
3.3.1	Warnings.....	18
3.3.2	Errors.....	18
3.3.2.1	Error codes.....	18
3.4	Operating modes.....	19
3.4.1	Positioning mode.....	19
3.4.1.1	Limiting values.....	20
3.4.1.2	Limit switch.....	21
3.4.1.2.1	Example of a configuration.....	21
3.4.1.2.2	Assembly of the limit switches.....	22

3.4.1.3	Loop positioning.....	22
3.4.1.4	Inching operation.....	23
3.4.1.4.1	Inching operation1.....	23
3.4.1.4.2	Inching operation2.....	23
3.4.1.5	Travel Against Load.....	24
3.4.1.6	Control word: Positioning mode (master/slave).....	24
3.4.1.7	Status word: Positioning mode (slave/master).....	25
3.4.1.8	Flow chart: Operating mode Positioning mode.....	27
3.4.2	Local control (Stand Alone Operation).....	28
3.4.2.1	Inching operation.....	28
3.4.2.2	Specifying the set point.....	28
3.4.3	Digital inputs and outputs.....	29
3.4.3.1	Examples of digital input configurations.....	30
3.4.3.2	Example of digital output configuration.....	31
3.4.4	Position Control Mode.....	31
3.4.4.1	Examples of configuration of the digital inputs for the PCM.....	32
3.4.5	Calibration.....	33
3.4.6	Sense of Rotation.....	34
3.4.7	Rotational speed mode.....	34
3.4.7.1	Control word Operating mode: Speed mode.....	35
3.4.7.2	Status word Operating mode: Speed mode.....	36
3.4.7.3	Flow chart: Operating mode Speed mode.....	37
4	Ethernet POWERLINK.....	37
4.1	Description.....	37
4.1.1	Setting the node number.....	38
4.1.2	Cyclic data exchange.....	38
4.1.3	Acyclic data exchange.....	38
4.1.4	Operating modes and synchronization.....	38
4.2	Directory of objects.....	39
4.2.1	Parameter description of standard objects.....	39
4.2.1.1	1000h: NMT_DeviceType_U32.....	39
4.2.1.2	1001h: ERR_ErrorRegister_U8.....	39
4.2.1.3	1006h: NMT_CycleLen_U32.....	39
4.2.1.4	1008h: NMT_ManufactDevName_VS.....	39
4.2.1.5	1009h: NMT_ManufactHwVers_VS.....	40
4.2.1.6	100Ah: NMT_ManufactSwVers_VS.....	40
4.2.1.7	1018h: Identity Object.....	40
4.2.1.8	1020h: CFM_VerifyConfiguration_REC.....	41
4.2.1.9	1021h: CFM_StoreDevDescrFile_DOM.....	42
4.2.1.10	1022h: CFM_StoreDevDescrFormat_U16.....	42
4.2.1.11	1030h: NMT_InterfaceGroup_00h_REC.....	42
4.2.1.12	1300h: SDO_SequLayerTimeout_U32.....	44
4.2.1.13	1400h: PDO_RxCommParam_00h_REC.....	44

4.2.1.14	1600h: PDO_RxMappParam_00h_AU64.....	45
4.2.1.15	1800h: PDO_TxCommParam_00h_REC.....	46
4.2.1.16	1A00h: PDO_TxMappParam_00h_AU64.....	46
4.2.1.17	1COBh: DLL_CNLossSoC_REC.....	47
4.2.1.18	1COFh: DLL_CNCRCErrror_REC.....	48
4.2.1.19	1C14h: DLL_CNLossOfSocTolerance_U32.....	49
4.2.1.20	1F50h: PDL_DownloadProgData_ADOM.....	49
4.2.1.21	1F51h: PDL_ProgCtrl_AU8.....	50
4.2.1.22	1F52h: PDL_LocVerAppSw_REC.....	50
4.2.1.23	1F81h: NMT_NodeAssignment_AU32.....	51
4.2.1.24	1F82h: NMT_FeatureFlags_U32.....	51
4.2.1.25	1F83h: NMT_EPLVersion_U8.....	51
4.2.1.26	1F8Ch: NMT_CurrNMTState_U8.....	52
4.2.1.27	1F8Dh: NMT_PresPayloadLimitList_AU16.....	52
4.2.1.28	1F93h: NMT_EPLNodeID_REC.....	52
4.2.1.29	1F98h: NMT_CycleTiming_REC.....	53
4.2.1.30	1F99h: NMT_CNBasicEthernetTimeout_U32.....	55
4.2.1.31	1F9Bh: NMT_MultiplCycleAssign_AU8.....	55
4.2.1.32	1F9Eh: NMT_ResetCmd_U8.....	55
4.2.2	Parameter description of manufacturer specific objects.....	56
4.3	Commissioning aids.....	56
5	Parameters.....	56
5.1	Positioning.....	56
5.1.1	Sense of Rotation.....	56
5.1.2	Spindle Pitch.....	57
5.1.3	Gear Ratio Numerator.....	58
5.1.4	Gear Ratio Denominator.....	58
5.1.5	Pos Window.....	59
5.1.6	Offset Value.....	59
5.1.7	Delta Inch.....	60
5.1.8	InposMode.....	61
5.1.9	Pos Type.....	61
5.1.10	Loop Length.....	62
5.1.11	Calibration Value.....	63
5.1.12	Control Word.....	63
5.1.13	Status Word.....	64
5.1.14	Target Value.....	64
5.1.15	Actual Value.....	65
5.1.16	System Status Word.....	65
5.2	Actuator.....	68
5.2.1	Operating Mode.....	68
5.2.2	A-Pos.....	69
5.2.3	V-Pos.....	69

5.2.4	D-Pos.....	70
5.2.5	A-Inch.....	70
5.2.6	V-Inch.....	71
5.2.7	Inching 2 Offset.....	72
5.2.8	A-Rot.....	72
5.3	Limiting values.....	73
5.3.1	Software Limit.1.....	73
5.3.2	Software Limit.2.....	73
5.3.3	Peak Current Limit.....	74
5.3.4	Peak Current Time.....	75
5.3.5	Continuous Current.....	75
5.3.6	Contouring Error Limit.....	76
5.3.7	Travel Against Load Trigger.....	76
5.3.8	Travel Against Load Direction.....	77
5.4	Visualization.....	78
5.4.1	Display Orientation.....	78
5.4.2	Display Divisor.....	78
5.4.3	Display Divisor Application.....	79
5.4.4	Decimal Places.....	79
5.4.5	Direction Indication Function.....	80
5.4.6	Displayed Value 2nd Line.....	81
5.5	Options.....	82
5.5.1	Key Enable Time.....	82
5.5.2	Key Function Enable.....	82
5.5.3	Inching 2 Acceleration Type.....	83
5.5.4	Inching 2 Stop Mode.....	84
5.5.5	PIN Change.....	84
5.5.6	General Mapping Parameter.....	85
5.5.7	Configuration.....	86
5.5.8	S-Command.....	86
5.6	Controller parameter.....	87
5.6.1	Controller Parameter.P.....	87
5.6.2	Controller Parameter.I.....	88
5.6.3	Controller Parameter.D.....	89
5.7	Digital input/output.....	89
5.7.1	Digital Input 1 Functionality.....	89
5.7.2	Digital Input 2 Functionality.....	90
5.7.3	Digital Input 3 Functionality.....	91
5.7.4	Digital Input 4 Functionality.....	92
5.7.5	Digital Inputs Polarity.....	92
5.7.6	Digital Input Functionalities State.....	93
5.7.7	Digital Inputs State.....	94
5.7.8	Digital Output 1 Functionality.....	95
5.7.9	Digital Outputs Polarity.....	96

5.7.10	Digital Output Functionalities State.....	96
5.7.11	Digital Outputs Control.....	97
5.7.12	Service Interface Baud Rate.....	98
5.8	Position Control Mode.....	98
5.8.1	PCM Position.1.....	98
5.8.2	PCM Position.2.....	99
5.8.3	PCM Position.3.....	100
5.8.4	PCM Position.4.....	100
5.8.5	PCM Position.5.....	101
5.8.6	PCM Position.6.....	101
5.8.7	PCM Position.7.....	102
5.8.8	PCM Acceleration.1.....	102
5.8.9	PCM Acceleration.2.....	103
5.8.10	PCM Acceleration.3.....	104
5.8.11	PCM Acceleration.4.....	104
5.8.12	PCM Acceleration.5.....	105
5.8.13	PCM Acceleration.6.....	105
5.8.14	PCM Acceleration.7.....	106
5.8.15	PCM Velocity.1.....	106
5.8.16	PCM Velocity.2.....	107
5.8.17	PCM Velocity.3.....	108
5.8.18	PCM Velocity.4.....	108
5.8.19	PCM Velocity.5.....	109
5.8.20	PCM Velocity.6.....	109
5.8.21	PCM Velocity.7.....	110
5.8.22	PCM Deceleration.1.....	111
5.8.23	PCM Deceleration.2.....	111
5.8.24	PCM Deceleration.3.....	112
5.8.25	PCM Deceleration.4.....	112
5.8.26	PCM Deceleration.5.....	113
5.8.27	PCM Deceleration.6.....	114
5.8.28	PCM Deceleration.7.....	114
5.9	Device information.....	115
5.9.1	Output Stage Temperature.....	115
5.9.2	Virtual Motor Temperature.....	115
5.9.3	Voltage of Control.....	116
5.9.4	Voltage of Output Stage.....	117
5.9.5	Motor Current.....	117
5.9.6	Actual Position.....	118
5.9.7	Actual Rotational Speed.....	118
5.9.8	Overload.....	119
5.9.9	Actual Contouring Error.....	119
5.9.10	Gear Reduction.....	120
5.9.11	Encoder Resolution.....	121

5.9.12	Serial Number.....	121
5.9.13	SW Motor Controller.....	122
5.9.14	SW Ethernet Module.....	122
5.9.15	Production Date.....	123
5.9.16	Device ID.....	123
5.9.17	Generic Mapping Channel.....	124
5.10	Error memory.....	125
5.10.1	Number of Errors.....	125
5.10.2	Error Number.1.....	125
5.10.3	Error Number.2.....	126
5.10.4	Error Number.3.....	126
5.10.5	Error Number.4.....	127
5.10.6	Error Number.5.....	128
5.10.7	Error Number.6.....	128
5.10.8	Error Number.7.....	129
5.10.9	Error Number.8.....	129
5.10.10	Error Number.9.....	130
5.10.11	Error Number.10.....	130
6	Service protocol.....	131
6.1	General Information.....	131
6.1.1	Communication.....	131
6.1.2	Settings.....	131
6.1.3	ASCII commands.....	131
6.1.4	Responses.....	132
6.2	Commands.....	132
6.2.1	Start travel job.....	132
6.2.2	Start of inching mode 1.....	132
6.2.3	Start inching mode 2 positive travel direction.....	132
6.2.4	Start inching mode 2 negative travel direction.....	132
6.2.5	Cancel current travel job in positioning mode.....	132
6.2.6	Motor stop fast.....	133
6.2.7	Motor stop.....	133
6.2.8	Activate motor.....	133
6.2.9	Factory setting: all parameters.....	133
6.2.10	Factory setting: Standard parameter.....	133
6.2.11	Factory setting: Controller parameter.....	133
6.2.12	Factory setting: Visualization parameters.....	134
6.2.13	Factory setting: Network parameters.....	134
6.2.14	Acknowledge error.....	134
6.2.15	Calibrate.....	134
6.2.16	Delete error memory.....	134
6.2.17	Software reset.....	134
6.3	Flow charts.....	135

6.3.1	Flow chart: Operating mode: Positioning mode.....	135
6.3.2	Flow chart: Operating mode: Speed mode.....	136
6.4	Error number encoding.....	136
6.5	Examples.....	137
6.5.1	Write and read set point +500.....	137
6.5.2	Start travel job.....	137
6.6	ASCII command structure.....	137
6.7	Commissioning aids.....	138
7	Block diagram.....	139

1 General Information

1.1 Documentation

The following documents are associated with this document

- < The data sheet describes the technical data, the dimensions, the pin assignment, the accessories and the order key
- < The installation instructions describe the mechanical and electrical installation with all safety relevant conditions and the associated technical specifications
- < User manual describing the migration of the actuator into an Industrial Ethernet network and its commissioning.

You can also download these documents <https://www.sikoglobal.com/p/ag24>

2 Display and control keys

The actuator features an LCD display with special characters and three operating keys Δ , $*$ and \square .

The actuator can be configured and controlled via the keys.

The two LEDs and u inform about the operating status of the actuator.

The four LEDs v , x , y , and z inform about the operating status of the Ethernet module.

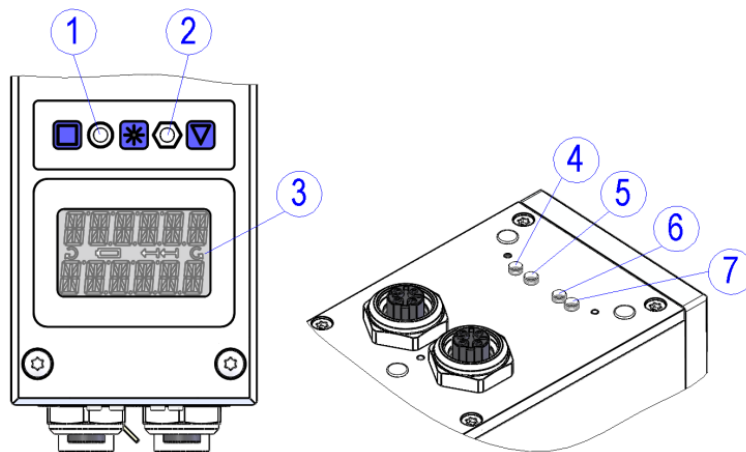


Fig. 1: Display and control elements

2.1 LCD display

With operating voltage applied to the control unit, the actual value is displayed in the 1st line and the target value is displayed in the 2nd line (the 2nd factory setting). The value displayed in the 2nd line can be chosen by means of parameter setting (see chapter 5.4.4). In the positioning mode, the direction indicators in the display indicate the key to be pressed for the inching mode to get to the set positioning velocity (see chapter 5.4.5). For signaling the speed mode, both direction indicators are activated in the display.

2.2 LED display

2.2.1 Status LED 1

NOTICE	If the actual value is unequal after switching on the module and outside the programmed positioning window, then the LED status "red, flashing" due to volatile storage of the set point is initialized with the value 0 after switching on.
---------------	--

LEDstate	Description
green	Actuator is within the programmed positioning window Operating voltage of the output stage is applied
green, flashing	Actuator is within the programmed position window Operating voltage of the output stage missing
red	Actuator is outside the programmed positioning window Operating voltage of the output stage is applied
red flashing	Actuator is outside the programmed positioning window Operating voltage of the output stage missing
off	Operating voltage of control missing

2.2.2 Status LED 2

LEDstate	Description
green	Operating voltage applied to control, no fault
red flashing	Operating voltage applied to control, active fault
flashing red/green	Operating voltage of control is applied, switch lock active
off	Operating voltage of control missing.

2.2.3 BE Error LED 4

NOTICE	A test sequence is executed on this LED after switching on. the de
---------------	--

LEDstate	Description
off	no error or no operating voltage
red	A nonfatal error has occurred if the STATUS LED is not red. A fatal error has occurred if the STATUS LED is red.

2.2.4 Link/Activity LED 5, 6

LEDstate	Description
off	no connection, no activity
green	connection(100Mbit/s) established
green, flickers	activity(100Mbit/s)
yellow	connection(10Mbit/s) established
yellowflickers	activity(10Mbit/s)

2.2.5 BS Status LED 7

NOTICE A test sequence is executed on this LED after switching on the d

LEDstate	Description
off	no error or no operating voltage
green, quickly flashing (50ms on / 50ms off)	no POWERLINK traffic detected
green, flashing 1x	NMT_CS_PRE_OPERATIONAL_1 only asynchronous data
green, flashing 2x	NMT_CS_PRE_OPERATIONAL_2 asynchronous and synchronous data no PDO data
green, flashing 3x	NMT_CS_READY_TO_OPERATE ready to operate
green	NMT_CS_OPERATIONAL in operation PDO data is sent and received.
green, slowly flashing (200ms on / 200ms off)	module stopped (e. g. for controlled shutdown) no PDO data
red	a fatal event has occurred if the ERROR LED is also red

2.3 Control keys

After applying operating voltage to the control, the control will be on the highest level of the menu structure, the positioning mode will be active (factory setting)

Pressing the  - key starts leftward travel (inching operation)

Pressing the  - key starts rightward travel (inching operation)

Releasing the respective key stops travel movement

Pressing the  - key starts the parameter / programming mode

2.3.1 Key lock and enable time

The access via keys to the functions of Inching mode 2, positioning mode and speed mode can be generally locked via the Key Enable parameter (see chapter 5.5.2). Temporary locking or enabling is possible via the control word Bit 9. The Key Enable Time parameter (see chapter 5.5.1) defines the necessary period of holding down the asterisk key until you get to the menu or until the preset setting via the Δ key is enabled, respectively.

2.3.2 Value input

NOTICE	When you enter values via the keys, the display range is -19999.99999. The display shows the characters: ^ `))))) ` 9 V ` f Q \ e U c ` R U i _ ^ T ` d X Y c ` service protocol "FULL" will be displayed when the parameter is called.
---------------	--

Enter values via the Δ key and the \square key
 Confirm values entered by pressing the * key

- key decimal place selection
- key value input

2.3.3 Value selection

For some parameters you can select values from a list. If direct value input is not possible there
 Pressing the Δ key, the value can be selected from the list. By pressing the * key, the selection is confirmed

2.4 Menu control

2.4.1 Menu selection

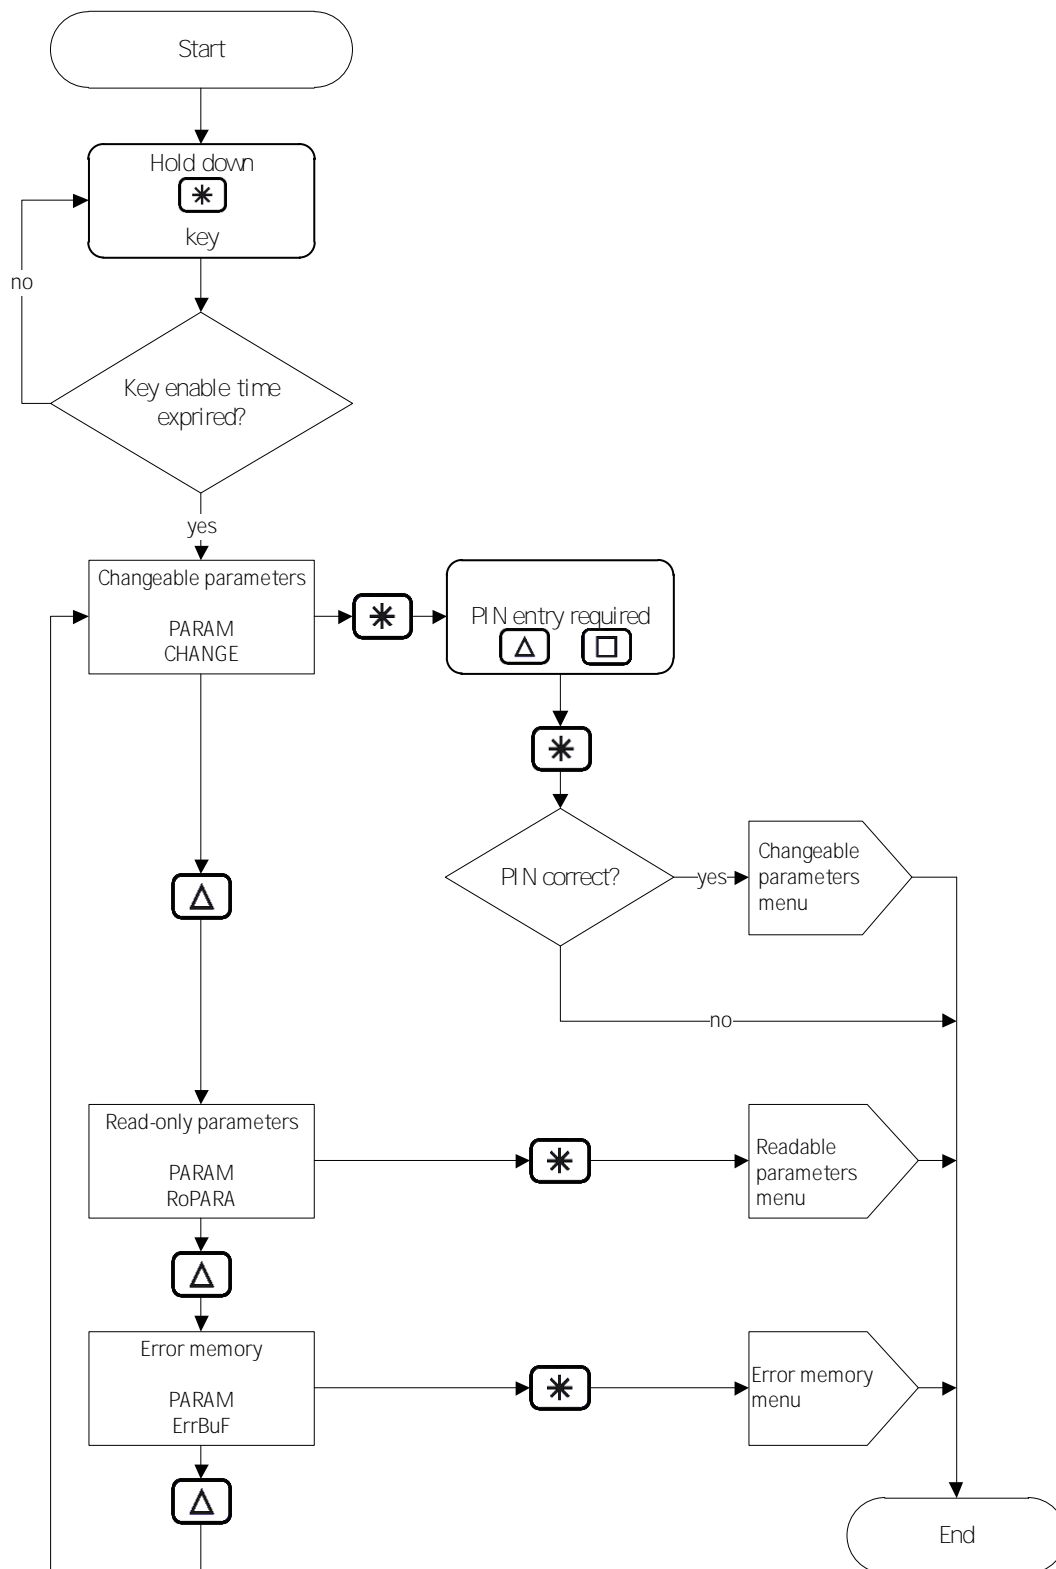


Fig. 2: Menu selection

2.4.2 Changeable parameters menu

The changeable parameters menu is structured as follows

Description	Display	Page
POWERLINK	EPL	37
Positioning	POSIT	56
Actuator	DRIVE	68
Limiting values	BOUNDS	73
Visualization	VISUAL	78
Options	OPTION	82
Controller parameter	CONTR	87
Digital input/output	DIG IO	89
Position Control Mode	PCM	98

2.4.2.1 PCM menu

The PCM menu is divided into single sets of parameters. A set of parameters contains a travel dataset, e.g. PARAM CHANGE PCM PCM SET\1

Description	Display
PCM Position 1	POS 1
PCM Acceleration 1	ACC 1
PCM Velocity 1	VEL 1
PCM Deceleration 1	DEC 1

2.4.3 Readable parameters menu

The readable parameters menu contains device information

Description	Display	Chapter
Output Stage Temperature	OS DEG	5.9.1
Virtual Motor Temperature	VM DEG	5.9.2
Voltage of Control	C VOLT	5.9.3
Voltage of Output Stage	P VOLT	5.9.4
Motor Current	MotCur	5.9.5
Actual Position	POS	5.9.6
Actual Rotational Speed	VEL	5.9.7
Overload	OVLOAD	5.9.8
Gear Reduction	REduc	5.9.10
Encoder Resolution	EncRES	5.9.11
Digital Inputs State	DI4321	5.7.7
Digital Output State	DO 1	
SW Motor Controller	VErDrv	5.9.13
SW Ethernet Module	VErMod	5.9.14

Description	Display	Chapter
Serial Number	SER No	5.9.12
Production Date	DtProd	5.9.15

2.4.4 Error memory menu

The error memory menu contains the number of errors that occurred (see chapter 3.3.2). Up to ten errors are stored cyclically in the error memory. Empty memory locations are listed in the menu. The last error is at the lowest position in the menu

Description	Display
Number of errors	Err No
Error number	Err 01
:	:
Error number	Err 10

Example: Err No = 6 > The last error is in the menu entry Err 06.

3 Functional description

If there is no upstream control, you can control the drive via keys or digital inputs and service interface, respectively. You can configure the drive via display and service interface

3.1 User units

With factory settings, the drive works with 1024 per revolution.

If scaling is desired, with no need to consider the internal gearbox, the Spindle Pitch (see chapter 5.1.2), Gear Ratio Numerator (see chapter 5.1.3) and Gear Ratio Denominator (see chapter 5.1.4) parameters must be set correspondingly

The scaled position value is calculated as follows

$$@_c Y d Y _ ^ \cdot \frac{Y \wedge d U b \wedge Q \setminus \cdot c _ d d Y _ c \cdot Y Y _ \wedge T \cdot \setminus F U Q \setminus @ Y U d S X}{5 \cdot S _ T U b \cdot W U Q b \cdot b Q d Y _}$$

The external gear ratio is calculated as follows (see chapter 3.1.3):

$$U h d U b \wedge Q \setminus \cdot \frac{7 U Q b \cdot B Q d Y _ \cdot > e] U b Q d _ b}{7 U Q b \cdot B Q d Y _ \cdot 4 U \wedge _ J Y \wedge Q d _ b}$$

Value jumps will occur if scaling exceeds the absolute encoder's basic resolution of 1024 per revolution

The following condition shall be met for this reason

$$\frac{C \setminus Y \wedge T \setminus U \cdot @ Y d S X}{U h d U b \wedge Q \setminus \cdot W U Q b \cdot b Q d Y _}$$

The travel range expressed as user units is calculated with the following formula

$$D b Q f U \setminus \cdot b Q \wedge W U \cdot \frac{C \setminus Y \wedge T \setminus U \cdot @ Y d S X}{U h d U b \wedge Q \setminus \cdot W U Q b \cdot b Q d Y _ \wedge}$$

[Illegible text]

3.1.1 Example of spindle drive

Spindle pitch $p = 2\text{mm}$

The drive is mounted directly to a spindle.
The desired unit of the position value is mm .

The Spindle Pitch parameter (see chapter 5.1.2) is calculated with the following formula

$$C \cdot Y^{\wedge} T \setminus U \cdot @ Y d S X \frac{J}{E c U b \cdot z \cdot p}$$

3.1.2 Example of toothed rod/pinion, straight toothing, metric division

Division $p = 5\text{mm}$

Number of pinion teeth $z = 20$

The desired unit of the position value is $\text{mm}/10$

The Spindle Pitch parameter (see chapter 5.1.2) is calculated with the following formula

$$C \cdot Y^{\wedge} T \setminus U \cdot @ Y d S X \frac{J}{E c U b \cdot z \cdot p} \cdot \frac{1}{z}$$

3.1.3 Example external gear

If an external gear is used, a factor can be programmed via the Gear Ratio Numerator (see chapter 5.1.3) and Gear Ratio Denominator (see chapter 5.1.4) in order to include the gear ratio in position sensing.

The actuator is operated on a gear with transmission reduction of 5:1. For this purpose, the parameters must be programmed as follows

- < Parameter Gear Ratio Numerator = 5
- < Parameter Gear Ratio Denominator = 1

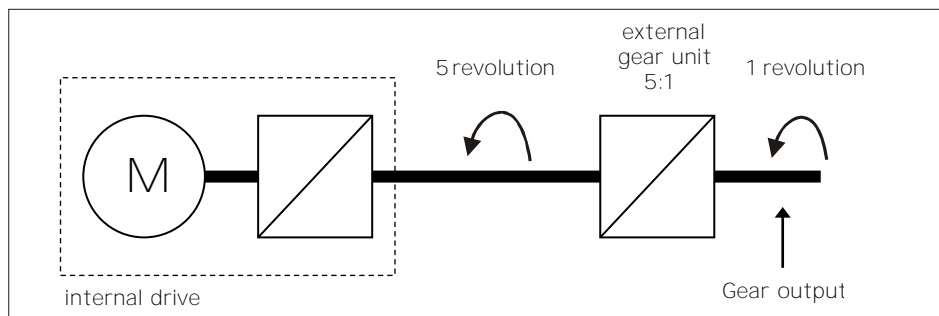


Fig. 3: External gear

Input of an odd gear transmission reduction value is possible according to the following example

- < Transmission reduction = 3.78
- < Parameter Gear Ratio Numerator = 378
- < Parameter Gear Ratio Denominator = 100

3.2 Protective functions

3.2.1 Current limiting

NOTICE	The actual motor current cannot be indicated by measuring the supply current. With cycled output stages, the supply current does not correspond to the motor current. Actual motor current can be indicated via the interface.
---------------	--

The current limit is set via parameter **Peak Current Limit** (chapter 5.3.3), which serves primarily for protecting the drive against overload.

With default set, nominal speed indicated on the data sheet is achieved

Actuator overload results in limiting the motor to the set value

As a consequence, the actuator cannot maintain the speed set, the contouring error increases. The actuator changes to the error status if the contouring error exceeds the contouring error limit defined by the **Contouring Error Limit** parameter (see chapter 5.3.4: contouring error)

3.2.2 I2t monitoring

I2t monitoring serves the protection of the output stage and gear.

The I2t limit is calculated with the following formula:

$$I_{2t} = \frac{I_{peak}^2 \cdot t_{peak}}{I_{nom}^2} \leq I_{2t_limit}$$

The resulting peak current time is calculated with the following formula

$$t_{peak} = \frac{I_{nom}^2 \cdot I_{2t_limit}}{I_{peak}^2}$$

3.2.3 Temperature monitoring

The temperature of output stage is measured directly on the output stage board. The output stage is switched off at

The motor temperature is calculated from the motor current based model. An error is triggered when the motor temperature exceeds

3.2.4 Overvoltage protection with energetic recovery

NOTICE	Active overvoltage protection of the operating voltage of the output stage is effective only with operating voltage of the output stage switched on.
---------------	--

NOTICE	The response of active overvoltage protection causes immediate sluggishness of the driving shaft. This shall be considered when shaft is adjusted manually.
---------------	---

Besides overvoltage protection by means of passive overvoltage elements, the actuator offers also active overvoltage protection of the operating voltage. In case of voltage rise caused by energetic recovery (e. g., foreign adjustment), the motor coils will be short-circuited for at least if the voltage of U_B exceeded. Excess energy will be converted to heat in the motor coils.

3.2.5 Contouring error monitoring

Disturbance variables such as load and friction may lead to the actuator's inability to follow the calculated travel profile. If control deviation of the positioning controller exceeds the value defined by the Contouring Error Limit (parameter 5.3.6), the contouring error will be triggered.

3.3 Warnings / Errors

3.3.1 Warnings

Warnings do not influence the operation of the actuator
Warnings disappear after removing the cause

Possible warnings

- ◀ Current limiting active: The current limiting bit (bit 12) is set in the status word (see chapter 3.4.1.7).

3.3.2 Errors

Errors cause an immediate stop of drive movement. For drives with the brake option, the brake is activated. The drive will be activated if there is no brake option.

An error is indicated via the drive status LEDs and the display.

The error bit (Bit 7) is set in the status word

The error messages are entered in the error memory in the order of detection. The first 10 error messages are displayed when the error memory is full.

The cause of error can be tracked down with the help of the error codes

3.3.2.1 Error codes

NOTICE	If the error cannot be acknowledged after removal of the cause the error persists after power reset, then the drive must be inspected at the factory.
---------------	---

Error cod	Display	Fault	Trouble shooting
00h	-	No error	
07h	C UVLT	Low control electronics voltage	check control operating vol
08h	C OVLT	Control electronics overvoltage	check control operating vol
09h	P OVLT	Power electronics overvoltage	check output stage operati voltage
0Ah	TMP OS	Output stage excess temperat	reduce ambient temperatur reduce load
0Bh	LAG	Contouring error	reduce load reduce acceleration or speed
0Ch	BLOCK	Output shaft blocked	disengage shaft
10h	Q1OVR	EEPROM queue overrun	internal error
13h	CSEEP	EEPROM check sum	reset parameters to factory settings
14h	M WDER	Ethernet module watchdog	internal error
15h	M ERRO	Ethernet module in the ERROR status while travel job is activ	internal error
16h	M EXCE	Ethernet module in EXCEPTION	internal error The behavior of the drive w this fault occurs can be set the parameter configuration 6 (seechapte5.5.7).
17h	ACYTO	Timeout in acyclic data exchan	check cycle time of the con
20h	I2T	I2T limit exceeded	reduce load reduce acceleration or veloc
21h	TMO MC	Motor overtemperature	reduce load or duty cycle
22h	ENCODR	Encoder error	internal error

Table1: Error codes

3.4 Operating modes

The following operating modes are distinguished: ~~positioning~~ and speed mode
In the positioning mode, inching operation is additionally available. Drive control via digital inputs and Position Control Mode is possible independent of the chosen operating mode.

3.4.1 Positioning mode

In the positioning mode, positioning to the specified set point is executed by means of a ramp function (fig. 4) calculated on the basis of the actual position as well as the programmed controller parameters acceleration and speed

After activating the travel job, the actuator accelerates with the acceleration A (seechapte5.2.2) to velocity-Pos(seechapte5.2.3). The measure of delay until reaching the setpoint is also-Pos.

Alternately, the delay PDs (see chapter 5.2.4) can also be used to configure a value that deviates from the acceleration.

The actuator is repositioned to the calculated path of PID position controller. The controller can be optimized and adjusted to the local conditions via the Controller Parameter (see chapter 5.6.1), Controller Parameter (see chapter 5.6.2) and Controller Parameter (see chapter 5.6.3) controller parameters

Changing controller parameters during a positioning process does not influence the current positioning operation

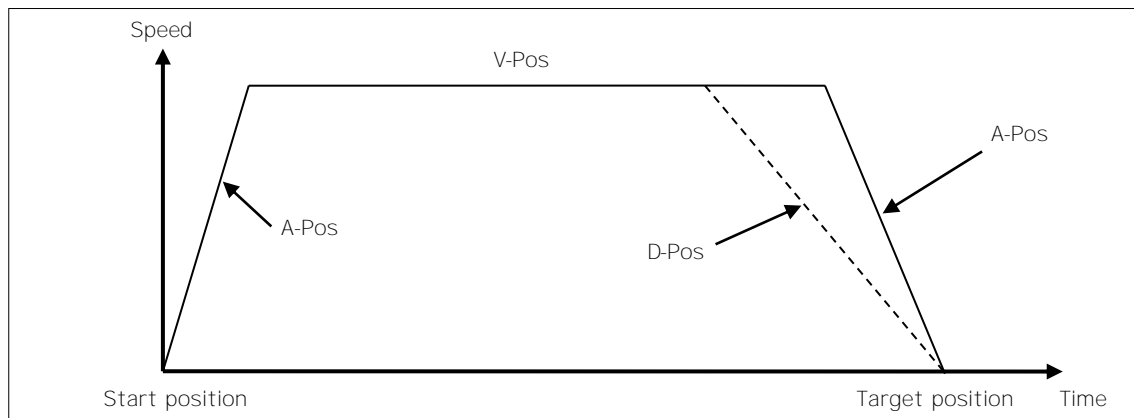


Fig. 4: Ramp travel, direct positioning mode

If the actual position is inside the window defined by the Pos Window parameter (see chapter 5.1.5), this will be signaled by Bit 5 = 1 in the word upon reaching the programmed window via parameter (see chapter 5.1.9), you can define the behavior of the actuator

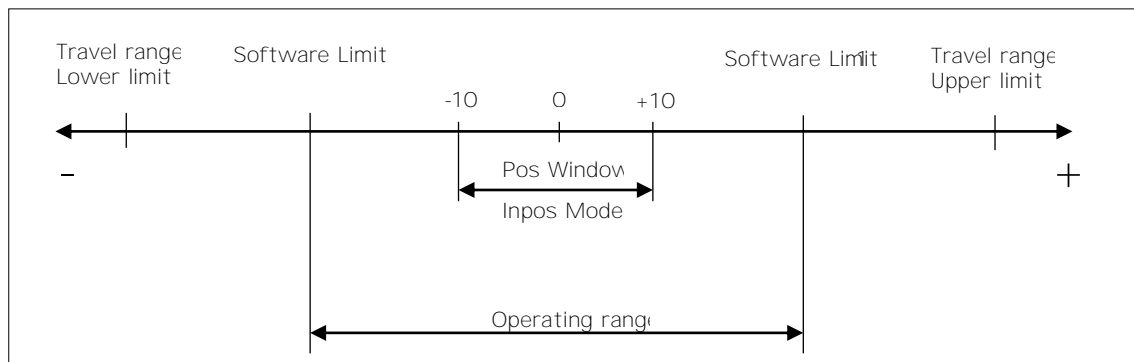


Fig. 5: Positioning mode

3.4.1.1 Limiting values

NOTICE	<p>Positioning operating mode</p> <p>If Software Limit 1 (see chapter 5.3.1) is equal Software Limit 2 (see chapter 5.3.2), then monitoring of the software limit value is deactivated. If the resolution of the absolute encoder is exceeded, there will be a jump of the actual position.</p> <p>Speed operating mode: insignificant</p>
---------------	--

NOTICE	If the drive's position is outside the operating range defined by S Limit 1 and Software Limit 2, then traveling is only enabled in inch in the direction of the operating range.
---------------	---

The Software Limit 1 parameter (see chapter 5.3.1) and Software Limit 2 parameter (see chapter 5.3.2) define the operating range of the drive. Travel jobs with target positions outside the operating range or which are equal the limiting value will not be executed. If the operating range is left in inching operation, the drive will be stopped. If the brake option is available for the drive, it will be activated whereas the drive will be activated if there is no brake option.

3.4.1.2 Limit switch

If the limit switch function is to be used, two digital inputs must be configured correspondingly

3.4.1.2.1 Example of a configuration

Example of a configuration for the connection of proximity switches DC PNP N/C contacts (NC).

Parameter	Value	Chapter
Digital Input 1 Functionality	1	5.7.1
Digital Input 2 Functionality	2	5.7.2
Digital Inputs Polarity	3	5.7.5
Digital Input Functionalities State	-	5.7.6

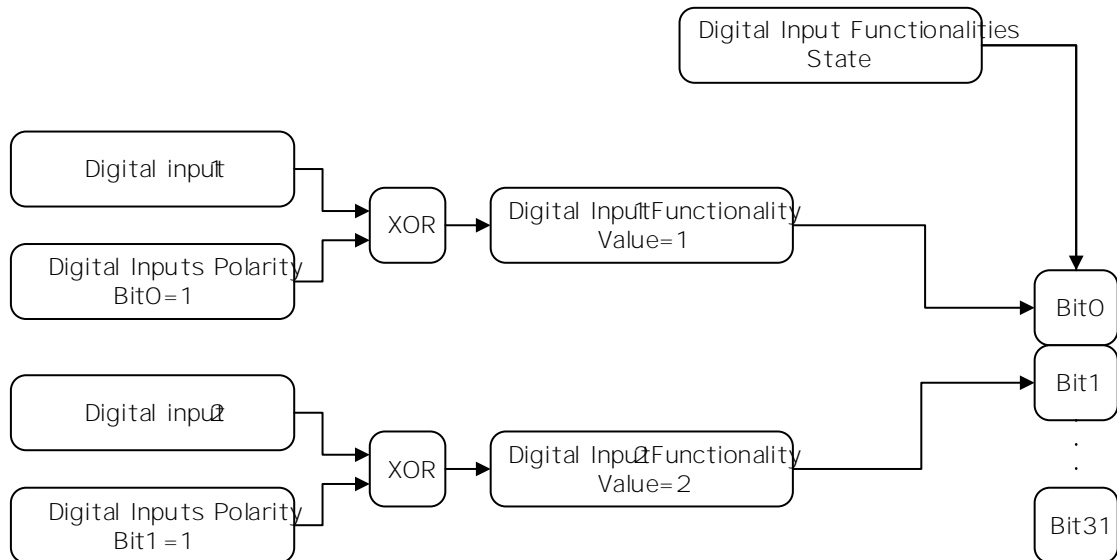


Fig. 6 Example of a limit switch configuration

3.4.1.2.2 Assembly of the limit switches

The limit switches are assembled according to the following pattern independent of the configured sense of rotation

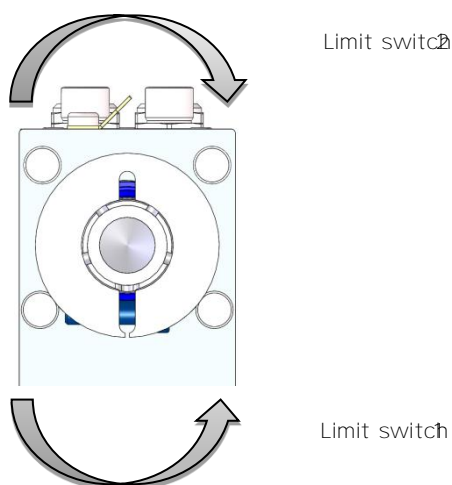


Fig. 7: Assembly of the limit switches

3.4.1.3 Loop positioning

NOTICE	A travel order will not be executed if loop positioning would exceed limiting values specified by parameter Software Limits (chapter 5.3.1) and Software Limits (chapter 5.3.2) although the point is within the limiting values.
---------------	---

If the actuator is operated on a spindle or an additional transmission, the spindle or external gearbacklash can be compensated by means of loop positioning. In this case, traveling to the target value is always from the same direction. Travel direction can be determined via parameter Pos Type (chapter 5.1.9). Loop length is set via parameter Loop Length (see chapter 5.1.10).

Example

The direction from which every target position shall be driven to is positive

- < Case 1 new position is greater than actual position
Direct travel to required position
- < Case 2 new position is smaller than actual position
The actuator drives beyond the target position by the loop length; afterwards, the set point is approached in positive direction

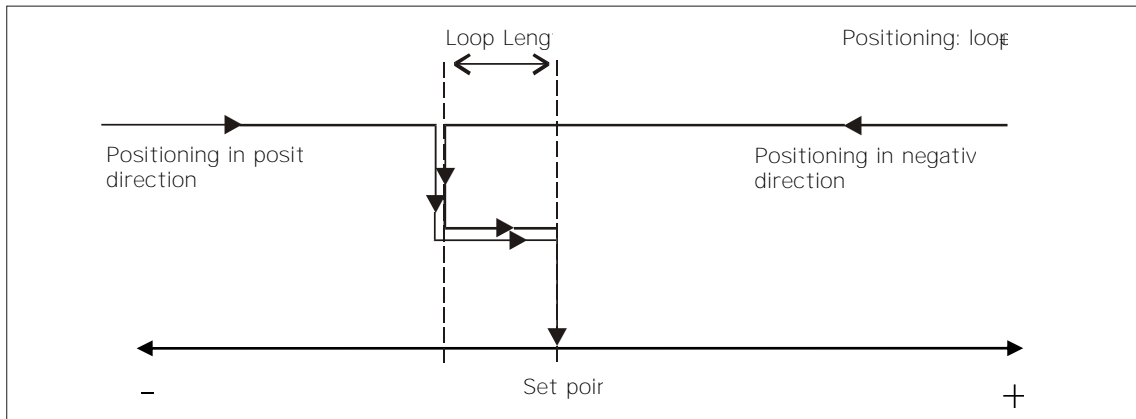


Fig. 8 Positioning Loop

3.4.1.4 Inching operation

NOTICE	There is no compensation for spindle backlash (loop positioning) operating mode.
---------------	--

Inching operations are enabled in the positioning mode only. You can program via parameters acceleration as well as speed in the inching operation.

3.4.1.4.1 Inching operation 1

NOTICE	If the actual position is outside the programmed limiting values, traveling from this position in the respective direction must be performed by means of inching operation 1 or 2.
---------------	--

The drive travels once from the current actual position by the value (see chapter 5.1.7) depending on the mathematical sign of the value entered

- < Delta Inch < 0 negative travel direction
- < Delta Inch > 0 positive travel direction

Reaching of the target position will be signaled accordingly.

The digital input can be configured for starting inching operation 1.

The following conditions must be met for enabling the start of inching operation 1 and 2

- < Supply voltage of the output stage is applied
- < Operation enabled
- < Drive stands still

3.4.1.4.2 Inching operation 2

The actuator travels from the current position as long as the relevant command is active. You can influence the inching speed via two parameters and it will be calculated in the actuator as illustrated in the example below

- < V-Inch (see chapter 5.2.6) = 10rpm (can only be changed in the idle) state
 - < Inching 2 Offset (see chapter 5.2.7) = 85% (can be changed during inching operation)
- The resulting inching speed in this example will be
- < Inching speed v- Tipp * Offset Inching 2 = 10rpm * 85% = 9rpm

Results are always rounded to integers
 Minimum speed is 1rpm.

3.4.1.5 Travel Against Load

NOTICE	This function is only available in connection with the spring force option.
---------------	---

NOTICE	The Travel Against Load function, if activated, is only available in operation 1, inching operation 2 and in the positioning mode.
---------------	--

Traveling against a pressing load causes temporary displacement of the axis contrary to the direction of movement when the brake is opened because the motor had not been able to build up torque. This effect can be interacted via the Travel Against Load function. The spring force brake will not be opened until the motor current exceeds the value of the Travel Against Load Trigger parameter (see chapter 5.3.7). Thus, the motor is able to build up torque before the brake is opened.

The Travel Against Load Direction parameter (see chapter 5.3.8) defines the travel direction where the function is intended to be active.

3.4.1.6 Control word: Positioning mode (master/slave)

Bit	Description
Bit 0 OFF1 (activate)	0 =OFF1 active Current travel job is canceled The actuator is activated
	1 =OFF1 inactive
Bit 1 OFF2 (max. delay)	0 =OFF2 active Current travel job is canceled. The actuator is decelerated with max. delay, the actuator continues to be controlled.
	1 =OFF2 inactive
Bit 2 OFF3 (progr. delay)	0 =OFF3 active Current travel job is canceled. The actuator is decelerated with programmed delay actuator continues to be controlled.
	1 =OFF3 inactive
Bit 3 Intermediate stop	0 =no intermediate stop
	1 =intermediate stop active
Bit 4 Start travel job	Positive flank starts a travel job
Bit 5 Acknowledge error	Positive flank acknowledges an error Afterwards, the actuator changes to the stop state

Bit	Description
Bit 6 Inchingoperation1	0 =no inchingoperation1 If the inchingoperations not completed it will be canceled 1 =inchingoperation1 As long as this bit is set, the actuator travels the distance specified in parameter Delta Tipp
Bit 7 Inchingoperation2 positive	0 =no inchingoperation2 positive 1 =inchingoperation2 positive The actuator travels in positive direction
Bit 8 Inchingoperation2 negative	0 =no inchingoperation2 negative 1 =inchingoperation2 negative inchingoperation2 negative
Bit 9 Key enable	0 =Key enable as defined by the Key Function Enable parameter (see chapter 5.5.2) 1 =Key enable inverted as defined by the Key Function Enable parameter
Bit 10 Relative positioning	0 =absolute positioning 1 =relative positioning
Bit 11^ 14	Reserved, always 0
Bit 15 Calibration	Positive edge calibrates the drive (see chapter 3.4.5)

Table 2 Positioning mode control word

3.4.1.7 Statusword: Positioning mode (slave¹ master)

Bit	Description
Bit 0 Operating voltage	0 =output stage operating voltage missing 1 =operating voltage of the output stage is applied
Bit 1 Readiness to travel	0 =not ready to travel 1 =ready to travel
Bit 2 Upper limit	0 =no violation of limit 1 =upper limit exceeded
Bit 3 Lower limit	0 =no violation of limit 1 =lower limit undercut
Bit 4 Actuator travels/stands still	0 =actuator stands still 1 =actuator travels
Bit 5 Inpos	0 =actuator is outside the position window 1 =actuator is inside the position window
Bit 6 Active travel job	0 =no active travel job 1 =active travel job
Bit 7 Error	0 =no error 1 =Error Acknowledgment with positive flag control word bit
Bit 8 Operation enabled	0 =operation not enabled 1 =operation enabled
Bit 9 Switchlock	0 =no switchlock 1 =switchlock

Bit 10 Travel job acknowledgment	0 =no acknowledgment 1 =acknowledgment The bit is set when the travel job was adopted. If bit is reset in the control word, this bit will be reset as well.
Bit 11 Current limiting	no function 0 =current limiting inactive 1 =current limiting active Motor current exceeds the value set under parameter Peak Current Limit (see chapter 5.3.3).
Bit 13 Limit switch	0 =Limit switch inactive 1 =Limit switch active (Configuration of a digital input required) (see chapter 5.7.1).
Bit 14 Limit switch	0 =Limit switch inactive 1 =Limit switch active (Configuration of a digital input required)
Bit 15 Calibration acknowledgment	0 =no acknowledgment 1 =Acknowledgment The bit is set when calibration has been completed successfully. If Bit 15 is reset in the control word, it is reset as well.

Table 3 Status word of positioning mode

3.4.1.8 Flow chart: Operating mode Positioning mode

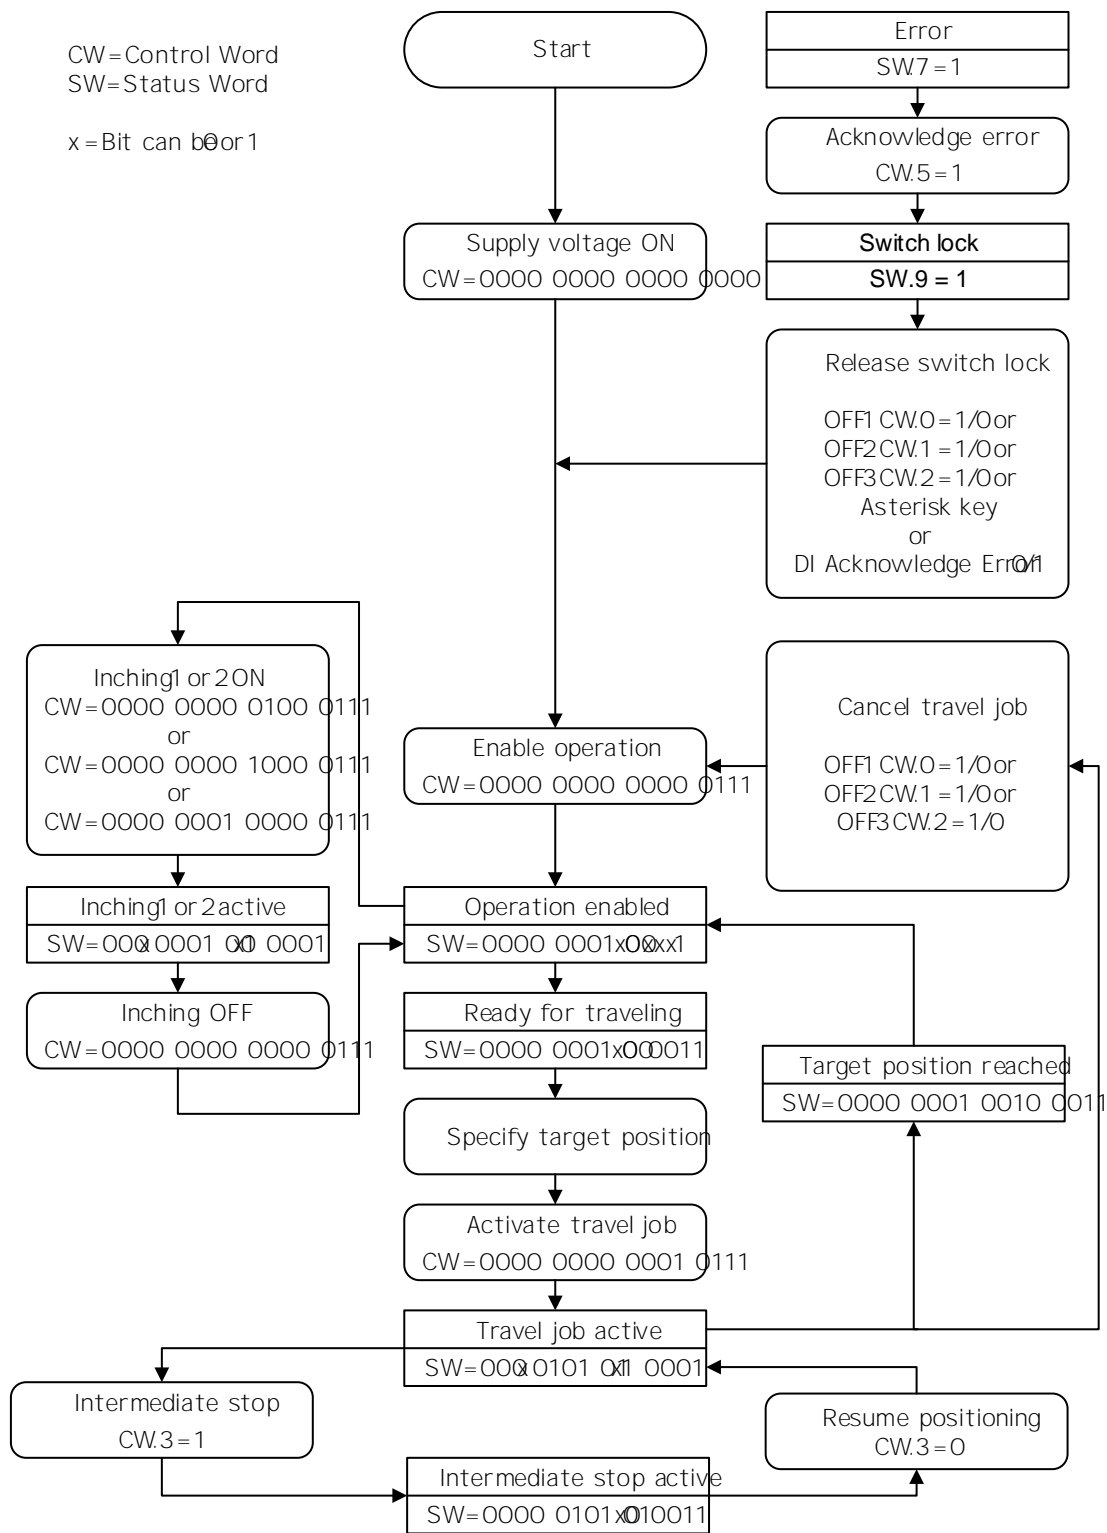


Fig. 9 Flowchart positioning mode

3.4.2 Local control (Stand Alone Operation)

3.4.2.1 Inching operation 2

After applying the operating voltage to the controller will be on the uppermost level of the menu structure, positioning mode is active (factory setting).

Pressing the  - key starts leftward travel (inching operation 2).

Pressing the  - key starts rightward travel (inching operation 2).

Releasing the respective key stops travel movement.

Pressing the  - key starts the parameter / programming mode.

3.4.2.2 Specifying the set point






NOTICE	Travel jobs started in stand alone operation can be canceled anytime pressing the  key
---------------	---

NOTICE	The setpoint setting submenu can also be quit without starting a travel job. For this purpose, you must wait a period of 30 seconds without actuating a key. Afterwards, there will be an automatic return to display.
---------------	--








Example: Starting positioning order to position 500

Preconditions

- < The display is at the uppermost level of the menu structure (basic state)
- < Operating mode: Positioning mode
- < Key functions: enabled

0 0	Initial state: normal display First press the  key, then the  key and hold down together
TARGET 3	The Key Enable Time (chapter 5.5.1) is counted down
TARGET 00000	After expiry of the Key Enable Time, the input field is released The first decimal place is active (flashing) Press the  key 2x to change to the third decimal place
TARGET 00000	The third decimal place is active Press the  key 5 times
TARGET 00500	Value 500 will be displayed Confirm by pressing the  key to start positioning

Example: Starting positioning order to position

0	Initial state: normal display
0	First press the  key, then the  key and hold down together
TARGET 3	The Key Enable Time (chapter 5.5.1) is counted down
TARGET 00000	After expiry of the Key Enable Time, the input field is released The first decimal place is active (flashing) Press the  key 2x to change to the third decimal place
TARGET 00000	The third decimal place is active Press the  key 5 times
TARGET 00500	Value 500 will be displayed Press the  key 3x to change to the sixth decimal place
TARGET 000500	The sixth decimal place is active and flashes Press the  key 11 times for setting the arithmetical sign
TARGET -00500	Value -500 will be displayed Confirm by pressing the  key to start positioning

3.4.3 Digital inputs and outputs

The actuator has four configurable digital inputs and one configurable digital output

Function and switching behavior can be set. The statuses of the digital inputs and outputs cannot be overwritten via software.

No function has been assigned to the digital inputs in the factory setting

The logical status of the digital inputs is mapped in the process data independent of the assigned function

If a function was assigned to the digital input, the functions and conditions of the digital inputs can be read in the register Digital Input Functionalities States (chapter 5.7.6).

With factory settings, the digital output can be actuated via the process data

If a function is assigned to the digital output, it is actuated via register Digital Outputs Functionalities States (chapter 5.7.10).

3.4.3.1 Examples of digital input configurations

The following configuration deviates from the factory setting and requires parameterization by the user

- ◁ Digital input 1: Limit switch 1-(low) proximity switch DC PNP NC
- ◁ Digital input 2: Limit switch 2-(low) proximity switch DC PNP NC
- ◁ Digital input 3: Inching operation 2 positive travel direction (high) pushbutton
- ◁ Digital input 4: Inching operation 2 negative travel direction (high) pushbutton

Parameter	Value	Chapter
Digital Input 1 Functionality	1	5.7.1
Digital Input 2 Functionality	2	5.7.2
Digital Input 3 Functionality	3	5.7.3
Digital Input 4 Functionality	4	5.7.4
Digital Inputs Polarity	3	5.7.5
Digital Input Functionalities State	-	5.7.6

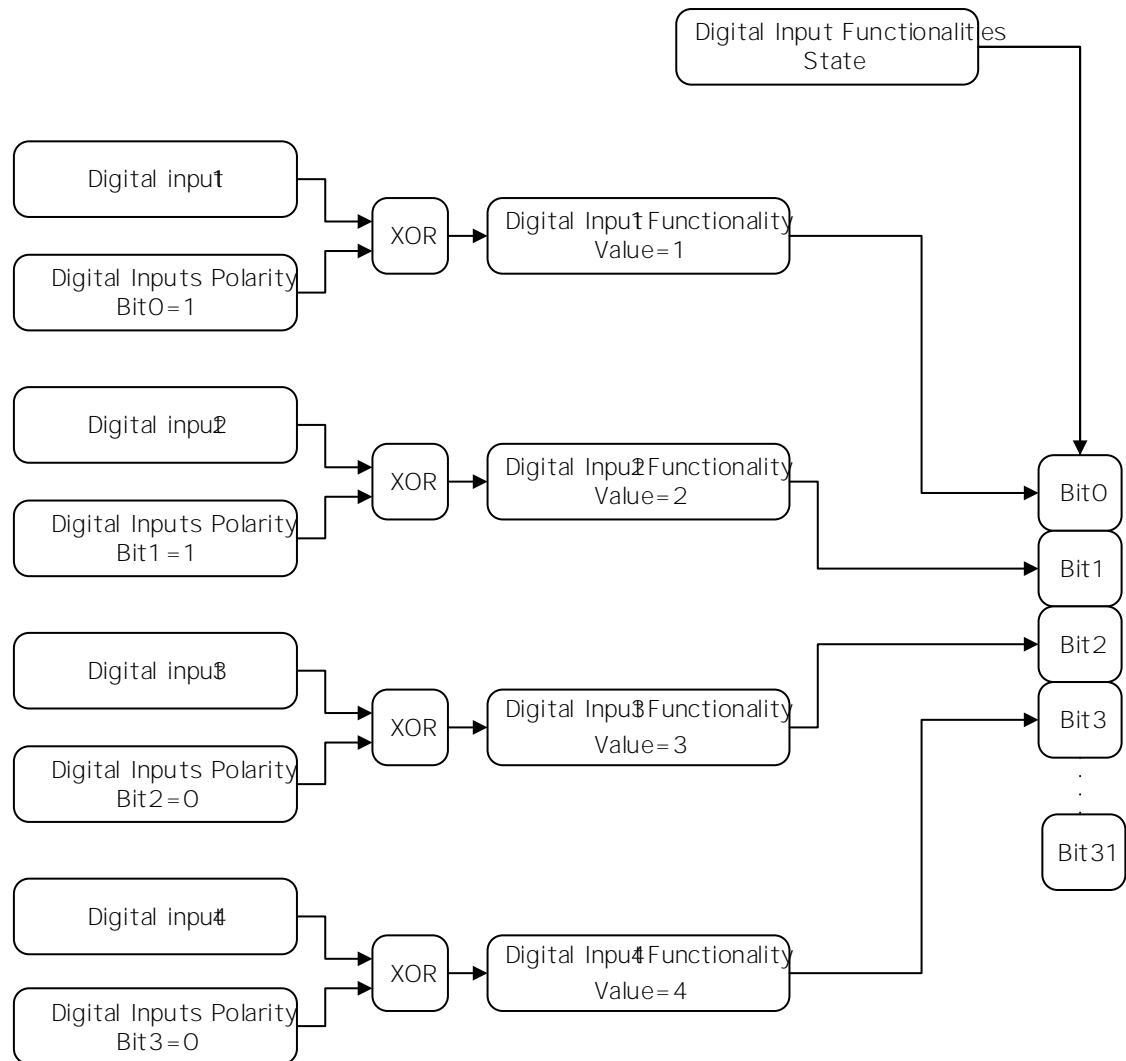


Fig. 10 Examples of digital input configurations

3.4.3.2 Example of digital output configuration

< Digital output 1: Inpos (high)

Parameter	Value	Chapter
Digital Output 1 Functionality	2	5.7.8
Digital Outputs Polarity	0	5.7.9
Digital Output Functionalities State	-	5.7.10

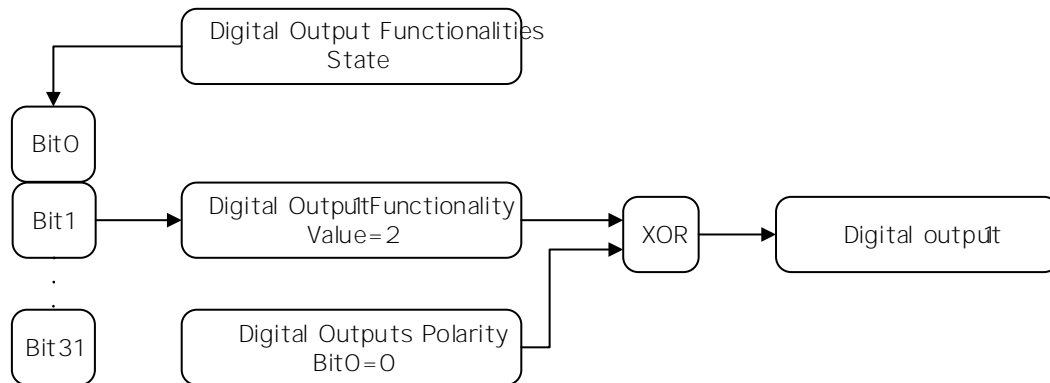


Fig. 11: Example of digital output configuration

3.4.4 Position Control Mode

NOTICE	<p>Via the control word in the process data, the superordinate control can cancel travel jobs started by the position control mode. For this purpose, a negative flank must be created on bits OFF1, OFF3 in the control word. Conversely, the PCM mode cannot cancel a travel order initiated via the superordinate control.</p>
---------------	---

The position control mode enables travel data sets to be called via the digital inputs. A total of 7 travel data sets can be saved.

The use of the position control mode requires configuration of the digital inputs.

The desired travel data set can be selected via PCM inputs 1 to 3 in binary addressing. Travel data set 0 does not exist.

3.4.4.1 Examples of configuration of the digital inputs for the PCM

- < Digital input1: PCMstart (high-active)
- < Digital input2: PCMinput1 (high-active)
- < Digital input3: PCMinput2 (high-active)
- < Digital input4: PCMinput3 (high-active)

Parameter	Value	Chapter
Digital Input 1 Functionality	8	5.7.1
Digital Input 2 Functionality	9	5.7.2
Digital Input 3 Functionality	10	5.7.3
Digital Input 4 Functionality	11	5.7.4
Digital Inputs Polarity	0	5.7.5
Digital Input Functionalities State	-	5.7.6

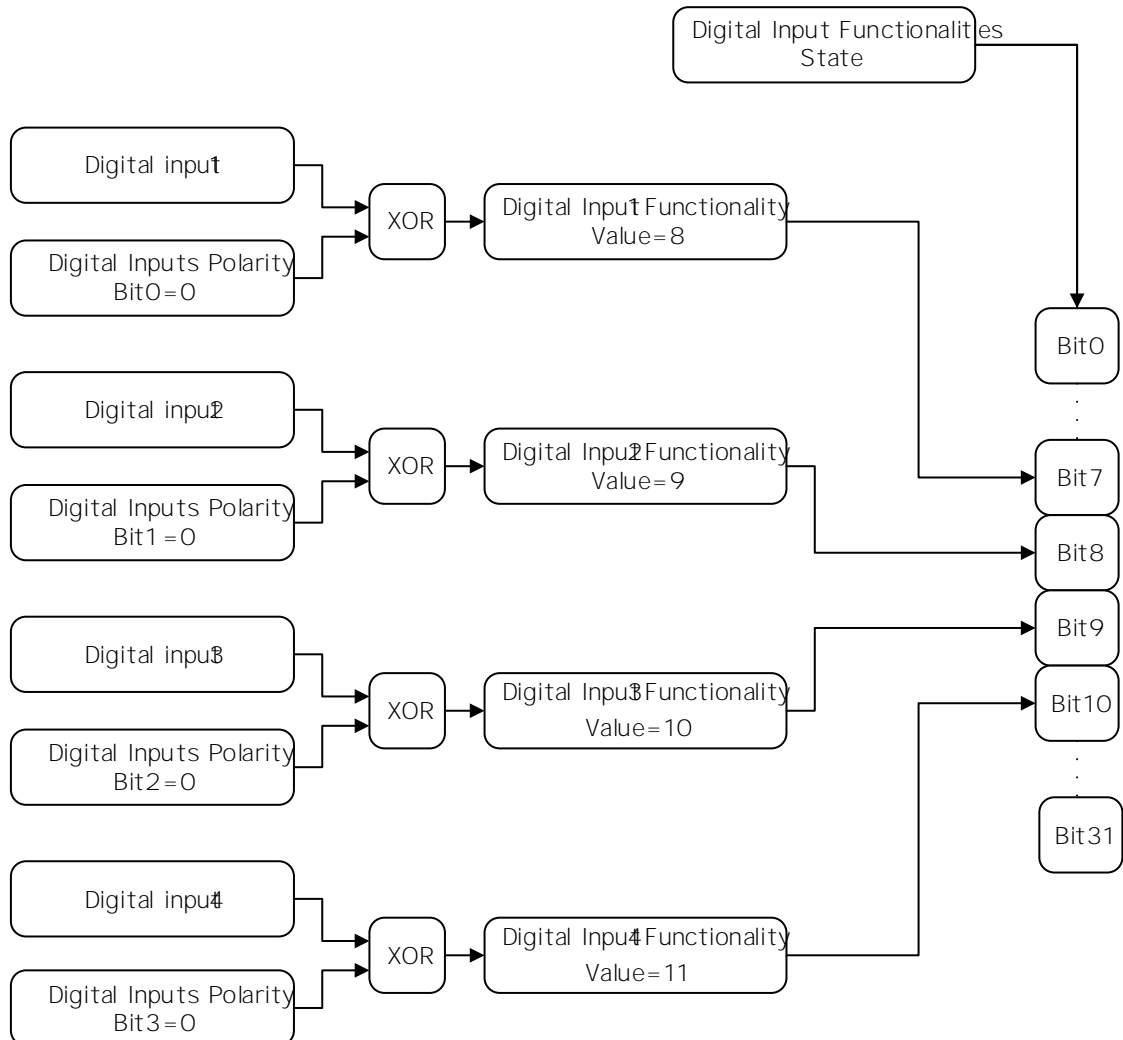


Fig. 12 Examples of configuration of the digital inputs for the PCM

Example of the parameter set of travel data set no. 3.

Parameter	Chapter
PCM Position 3	5.8.3
PCM Acceleration 3	5.8.10
PCM Velocity 3	5.8.17
PCM Deceleration 3	5.8.24

After applying the coding to the inputs, the travel job can be started by a positive flank on the PCM Start input

Resetting the PCM Start input during an active positioning process will result in cancellation of the travel job but the drive will continue to be controlled

An example of calling travel data set no. 3 is shown below.

Step 1: Create number of travel data set

Input	State
PCM Start	0
PCMInput1	1
PCMInput2	1
PCMInput3	0

Step 2: Start the positioning job

Input	State
PCM Start	0/1
PCMInput1	1
PCMInput2	1
PCMInput3	0

3.4.5 Calibration

NOTICE	Calibration is only possible when no travel job is active and the d (no foreign adjustment).
---------------	--

Two steps are required for executing calibration

- < Write calibration value Parameter Calibration Value (chapter [5.1.11](#))
- < Execute calibration (software command or calibration input)

Calibration can be triggered by a positive flank to control word 15 on the unit to the SCommand parameter (see chapter [5.5.7](#)). Alternately, a digital input can be configured as calibration input as well

Since the measuring system is an absolute system, calibration is necessary only once with commissioning. With calibration, the calibration value is adopted for calculation of the position value. The following equation is applied in case of calibration

- < Position value = 0 + calibration value + offset (see chapter [5.1.6](#))

Changes to the offset value are immediately included in the calculation of the position value

3.4.6 Sense of Rotation

NOTICE	With a change of the sense of rotation, the arithmetic sign of the position will be changed
---------------	---

With the Sense of Rotation parameter (see chapter 5.1.1), the travel direction can be adjusted to the mechanical conditions

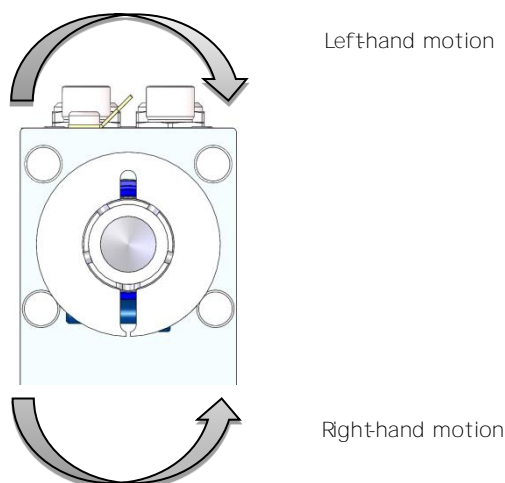


Fig. 13 Sense of rotation

3.4.7 Rotational speed mode

NOTICE	Limits 1 + 2 are inactivated in this operational mode
---------------	---

NOTICE	For signaling the speed mode, both direction indicators are active display.
---------------	---

NOTICE	Exceeding the resolution of the absolute encoder results in a jump actual position
---------------	--

With the setpoint enabled, the actuator when in the rotational speed mode accelerates to the target speed and maintains this speed until the set point is disabled or a different target speed specified. Speed is adjusted immediately to the new value when the rotational speed is changed

The arithmetical sign of the set point determines the travel direction in the rotational speed mode

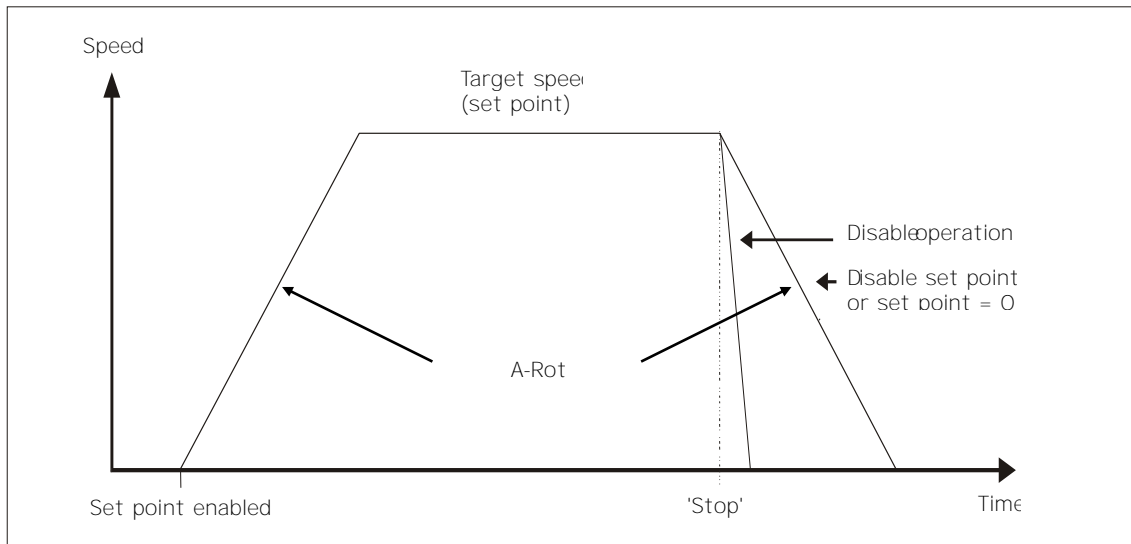


Fig. 14 Ramp speed mode

The following conditions must be met for enabling the start of the rotational speed mode

- < Supply voltage of the output stage is applied
- < Operation enabled
- < Drive stands still

If the actual speed is outside the window defined by the Pos Window parameter (see chapter 5.1.5), this will be signaled in the status word Bit 5 = 1

3.4.7.1 Control word Operating mode: Speed mode

Bit	Description
Bit 0 OFF1 (activate)	0 =OFF1 active Current travel job is canceled. The actuator is activated 1 =OFF1 inactive
Bit 1 OFF2 (max. delay)	0 =OFF2 active Current travel job is canceled. The actuator is decelerated with max. delay, the act continues to be controlled 1 =OFF2 inactive
Bit 2 OFF3 (progr. delay)	0 =OFF3 active Current travel job is canceled. The actuator is decelerated with progr. delay, the act continues to be controlled 1 =OFF3 inactive
Bit 3	Reserved, always 0
Bit 4 Start travel job	Positive flank starts a travel job
Bit 5 Acknowledge error	Positive flank acknowledges an error Afterwards, the actuator changes to the lock state
Bit 6 - 8	Reserved, always 0

Bit	Description
Bit 9 Key enable	0 =Key enable as defined by Key Function Enable parameter (seechapter5.5.2) 1 =Key enable inverted as defined by Key Function Enable parameter
Bit 10` 14	Reserved, always 0s
Bit 15 Calibration	Positive flank calibrates the drive (seechapter3.4.5)

Table4: Control word speed mode

3.4.7.2 Status word Operating mode: Speed mode

Bit	Description
Bit 0 Operating voltage	0 =output stage operating voltage missing 1 =operating voltage of the output stage is applied
Bit 1 Readiness to travel	0 =not ready to travel 1 =ready to travel
Bit 2	no function
Bit 3	no function
Bit 4 Actuator travels/stands still	0 = actuator stands still 1 = actuator travels
Bit 5 Inpos	0 = actuator is outside the position window 1 = actuator is inside the position window
Bit 6 Active travel job	0 = no active travel job 1 = active travel job
Bit 7 Error	0 = no error 1 = Error Acknowledgment with positive flank on Control word
Bit 8 Operation enabled	0 = operation not enabled 1 = operation enabled
Bit 9 Switchlock	0 = no switchlock 1 = switchlock
Bit 10 Travel job acknowledgment	0 = no acknowledgment 1 = acknowledgment The bit is set when the travel job was adopted. If bit is reset in the control word, this bit will be reset as well
Bit 11	no function
Bit 12 Current limiting	0 = current limiting inactive 1 = current limiting active Motor current exceeds the value set under parameter Current Lim (seechapter5.3.3).
Bit 13` 14	no function
Bit 15 Calibration acknowledgment	0 =no acknowledgment 1 = Acknowledgment The bit is set when calibration was completed successfully. If bit 15 is reset in the control word, this bit is reset

Table5: Status word of speed mode

3.4.7.3 Flow chart: Operating mode Speed mode

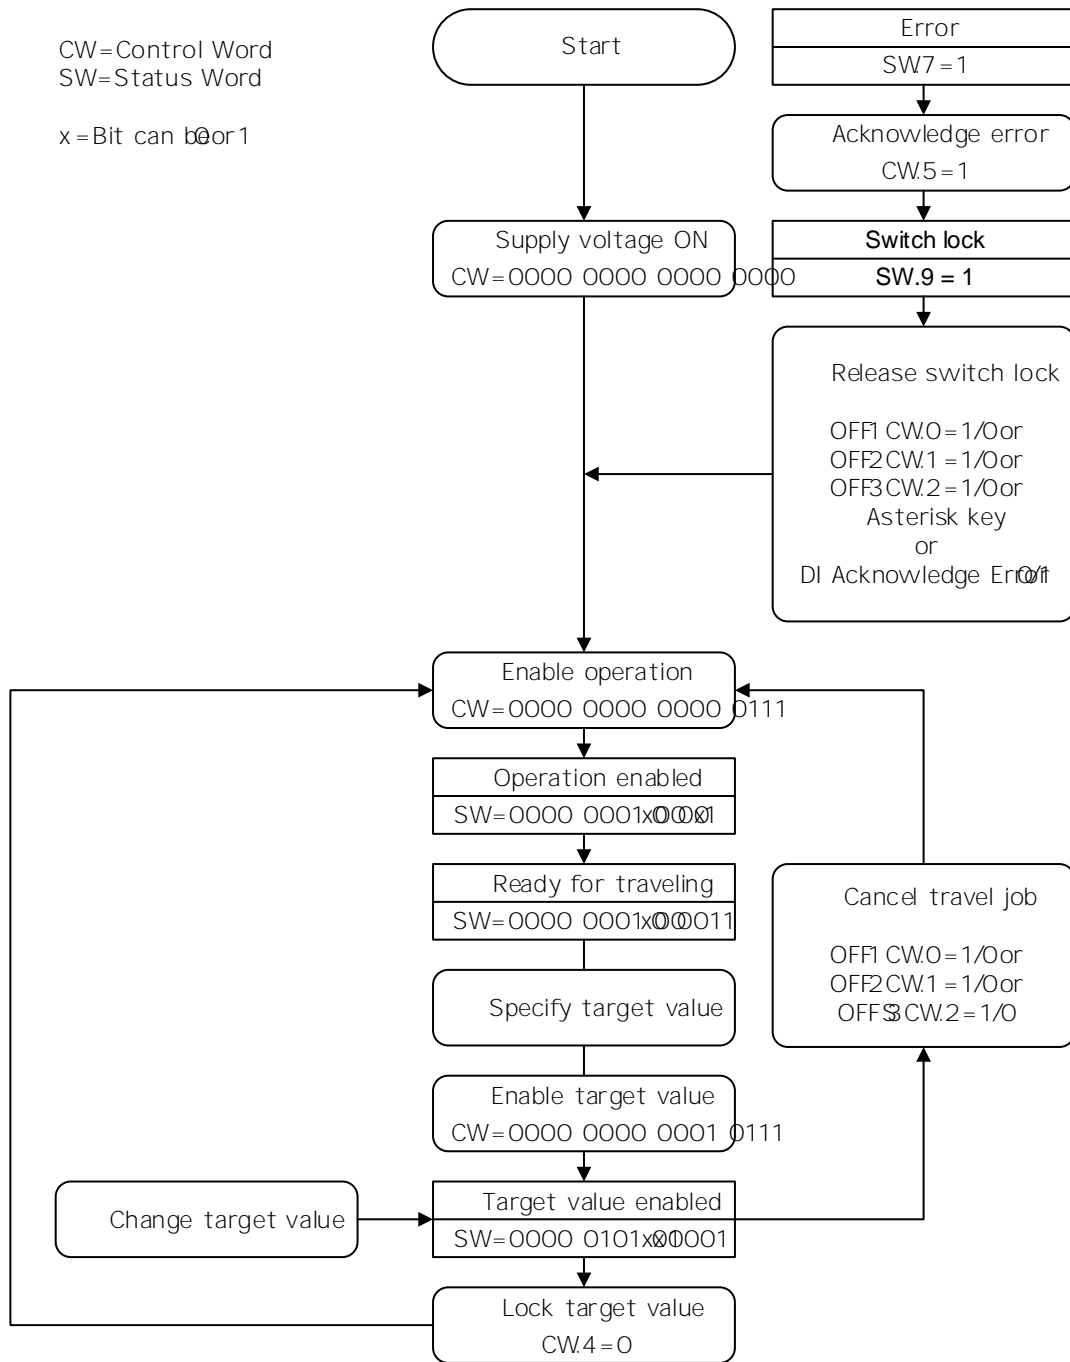


Fig. 15 Flow chart speed mode

4 Ethernet POWERLINK

4.1 Description

The actuator is an Ethernet POWERLINK Controlled Node (EN). The Ethernet POWERLINK communication profile is based on the DS301 and DS302 CANopen communication profiles

4.1.1 Setting the node number

NOTICE	After completing the settings, reset (soft boot) is required to enter the changed configuration is adopted.
---------------	---

NOTICE	The node number can be reset to the factory setting by command (see chapter 5.5.7). The node number is assigned to the parameter class N
---------------	---

The node number is set via the display menu PARAM CHANGE EPL ID.

D X U ' ^ U b] Y c c Y R \ U ' b Q ^ W U ' _ V ' d X U ' ^ _ T U ' ^ e] R U b ' V _ b ' .

The factory setting of the node number is 124.

Setting of the node number in the display menu PARAM CHANGE EPL:

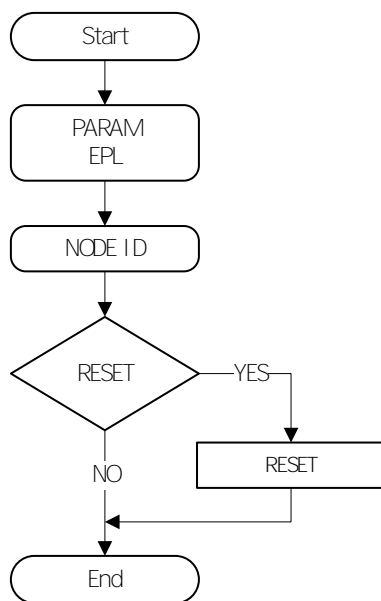


Fig. 16 Setting of the node number

4.1.2 Cyclic data exchange

Cyclic process data is exchanged via PDO. The actuator supports 1 TPDO and 1 RPDO. Mapping is static and cannot be changed.

4.1.3 Acyclic data exchange

Acyclic data is exchanged via SDO frames

4.1.4 Operating modes and synchronization

The actuator is not synchronized

4.2 Directory of objects

4.2.1 Parameter description of standard objects

4.2.1.1 1000h: NMT_DeviceType_U32

Subindex	00h
Description	Device profile
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	0000 0000ro (profile)

4.2.1.2 1001h: ERR_ErrorRegister_U8

Subindex	00h
Description	Error register
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	00h

4.2.1.3 1006h: NMT_CycleLen_U32

Subindex	00h
Description	Cycle time in μ s
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	200
Value range	200 2147483

4.2.1.4 1008h: NMT_ManufactDevName_VS

Subindex	00h
Description	Device name
Access	const
PDO mapping	no
Data type	VISIBLE_STRING64
Default	"SIKO DriveLine AG24 EPL"

4.2.1.5 1009h: NMT_ManufactHwVers_VS

Subindex	00h
Description	Hardware version
Access	const
PDO mapping	no
Data type	VISIBLE_STRING64
Default	"HW_000"

4.2.1.6 100Ah: NMT_ManufactSwVers_VS

Subindex	00h
Description	Software version
Access	const
PDO mapping	no
Data type	VISIBLE_STRING64
Default	"SW_01.01"

4.2.1.7 1018h: Identity Object

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	04h

Subindex	01h
Description	Vendor ID
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	0000 0195h

Subindex	02h
Description	Product code
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	0000 0102h

Subindex	03h
Description	Revision number
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	Current revision number

Subindex	04h
Description	Serial number
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	Serial number of the device

4.2.1.8 1020h: CFM_VerifyConfiguration_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	02h

Subindex	01h
Description	Date of configuration
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	0
Value range	z . . . 6 6 6 6 . 6 6 6 6 X

Subindex	02h
Description	Time of configuration
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	0
Value range	z . . . 6 6 6 6 . 6 6 6 6 X

4.2.1.9 1021h: CFM_StoreDevDescrFile_DOM

Subindex	00h
Description	Content of an XDD file
Access	ro
PDO mapping	no
Datatype	DOMAIN
Default	no XDD file existing

4.2.1.10 1022h: CFM_StoreDevDescrFormat_U16

Subindex	00h
Description	Description of the content of object 1021h
Access	ro
PDO mapping	no
Data type	UNSIGNED16
Default	FFh:Object 1021h contains no XDD file

4.2.1.11 1030h:NMT_InterfaceGroup_00h_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	09h

Subindex	01h
Description	InterfacelIndex_U16: Interface Index
Access	ro
PDO mapping	no
Data type	UNSIGNED16
Default	0001h

Subindex	02h
Description	InterfaceDescription_VSTR: InterfaceDescription
Access	const
PDO mapping	no
Data type	VISIBLE_STRING194
Default	"SIKO SIKO DriveLine AG24 EPL H00"02

Subindex	03h
Description	InterfaceType_U8: InterfaceType
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	06h

Subindex	04h
Description	InterfaceMtu_U16: Interface maximum transmission unit
Access	const
PDO mapping	no
Data type	UNSIGNED16
Default	1500 Bytes

Subindex	05h
Description	InterfacePhysAddress_OSTR: Interface Physical Address
Access	const
PDO mapping	no
Data type	OCTET_STRING6
Default	MAC address

Subindex	06h
Description	InterfaceName_VSTR: Interface Name
Access	ro
PDO mapping	no
Data type	VISIBLE_STRING11
Default	"Interface 1"

Subindex	07h
Description	InterfaceOperStatus_U8: Interface Operational Status
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	01h

Subindex	08h
Description	InterfaceAdminState_U8: Interface Admin State
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	01h

Subindex	09h
Description	Valid_Bool: Valid
Access	rw
PDO mapping	no
Data type	BOOLEAN
Default	01h

4.2.1.12 1300h: SDO_SequLayerTimeout_U32

Subindex	00h
Description	Timeout for detection of disconnection of the SDO sequence
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	15000
Value range	! ž ž ` ^ ` 6 6 6 6 6 6 6 6 X

4.2.1.13 1400h: PDO_RxCommParam_00h_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	02h

Subindex	01h
Description	NodeID_U8: Node ID
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	00h

Subindex	02h
Description	MappingVersion_U8: Mapping version
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	00h

4.2.1.14 1600h: PDO_RxMappParam_00h_AU64

Subindex	00h
Description	Number of entries
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	03h

Subindex	01h
Description	Mapped Object 001
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	0020 0000 0000 2003h

Subindex	02h
Description	Mapped Object 002
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	0010 0020 0000 2002h

Subindex	03h
Description	Mapped Object 003
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	00100030 0000 2001h

4.2.1.15 1800h: PDO_TxCommParam_00h_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	02h

Subindex	01h
Description	NodeID_U8: Node ID
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	00h

Subindex	02h
Description	MappingVersion_U8: Mapping version
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	00h

4.2.1.16 1A00h: PDO_TxMappParam_00h_AU64

Subindex	00h
Description	Number of entries
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	04h

Subindex	01h
Description	Mapped Object 001
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	0020 0000 0000 2103h

Subindex	02h
Description	Mapped Object 002
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	0020 0020 0000 2104h

Subindex	03h
Description	Mapped Object 003
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	0010 0040 0000 2102h

Subindex	04h
Description	Mapped Object 004
Access	ro
PDO mapping	no
Data type	UNSIGNED64
Default	00100050 0000 2101h

4.2.1.17 1COBh: DLL_CNLossSoC_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	03h

Subindex	01h
Description	CumulativeCnt_U32: Cumulative count
Access	rw
PDO mapping	no
Data type	UNSIGNED32
Default	0
Value range	ž · ^ · 6 6 6 6 6 6 6 X

Subindex	02h
Description	ThresholdCnt_U32: Threshold count
Access	ro
PDO mapping	no
Data type	UNSIGNED32
Default	0

Subindex	03h
Description	Threshold_U32: Threshold
Access	rw
PDO mapping	no
Data type	UNSIGNED32
Default	Fh
Value range	ž · ^ · 6 6 6 6 6 6 6 X

4.2.1.18 1C0Fh: DLL_CNCRCErrror_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	03h

Subindex	01h
Description	CumulativeCnt_U32: Cumulative count
Access	rw
PDO mapping	no
Data type	UNSIGNED32
Default	0
Value range	ž · ^ · 6 6 6 6 6 6 6 X

Subindex	02h
Description	ThresholdCnt_U32: Threshold count
Access	ro
PDO mapping	no
Datentyp	UNSIGNED32
Default	0

Subindex	03h
Description	Threshold_U32: Threshold
Access	rw
PDO mapping	no
Data type	UNSIGNED32
Default	Fh
Value range	0 6 6 6 6 6 6 6 X

4.2.1.19 1C14h: DLL_CNLossOfSocTolerance_U32

Subindex	00h
Description	Tolerance interval in [ns] to be applied for the CNs Loss of detection
Access	rw
PDO mapping	no
Data type	UNSIGNED32
Default	100000
Value range	0 100000

4.2.1.20 1F50h: PDL_DownloadProgData_AD0M

Subindex	00h
Description	Number of entries
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	01h

Subindex	01h
Description	A HIFF file for updating the module firmware
Access	wo
PDO mapping	no
Data type	DOMAIN

4.2.1.21 1F51h: PDL_ProgCtrl_AU8

Subindex	00h
Description	Number of entries
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	01h

Subindex	01h
Description	ProgCtrl: Program control
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	01hWriting a value other than 1 results in an SDO abort m (error code 08000024h)

4.2.1.22 1F52h: PDL_LocVerAppISw_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	02h

Subindex	01h
Description	AppISwDate_U32Number of dates between-0984 and the tir of software creation
Access	ro
PDO mapping	no
Data type	UNSIGNED32

Subindex	02h
Description	AppISwTime_U32milliseconds since midnight at the time of creation
Access	ro
PDO mapping	no
Data type	UNSIGNED32

4.2.1.23 1F81h: NMT_NodeAssignment_AU32

Subindex	00h
Description	Number of entries
Access	rw, valid on reset
PDO mapping	no
Datatype	UNSIGNED8
Default	FEh
Value range	ž ! X · ^ · 6 5 X

Subindex	ž ! X · ^ · 6 5 X
Description	NodeAssignment
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	0

4.2.1.24 1F82h: NMT_FeatureFlags_U32

Subindex	00h
Description	Feature Flags
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	48205h

4.2.1.25 1F83h: NMT_EPLVersion_U8

Subindex	00h
Description	Ethernet POWERLINK Version
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	20h

4.2.1.26 1F8Ch: NMT_CurrNMTState_U8

Subindex	00h
Description	Current NMT state
Access	ro
PDO mapping	no
Data type	UNSIGNED8

4.2.1.27 1F8Dh: NMT_PresPayloadLimitList_AU16

Subindex	00h
Description	Number of entries
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED8
Default	FEh
Value range	0 ! X FEh

Subindex	01h
Description	PresPayloadLimit
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED16
Default	36
Value range	0, 36 ! 1490, FFFFh

4.2.1.28 1F93h: NMT_EPLNodeID_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	02h

Subindex	01h
Description	NodeID_U8: NodeID
Access	ro
PDO mapping	no
Data type	UNSIGNED8
Default	Set NodeID

Subindex	02h
Description	NodeIDByHW_BOOL: NodeID by hardware
Access	ro
PDO mapping	no
Data type	BOOLEAN
Default	01h

4.2.1.29 1F98h: NMT_CycleTiming_REC

Subindex	00h
Description	Number of entries
Access	const
PDO mapping	no
Data type	UNSIGNED8
Default	08h

Subindex	01h
Description	IsochrTxMaxPayload_U16
Access	const
PDO mapping	no
Datatype	UNSIGNED16
Default	1490

Subindex	02h
Description	IsochrRxMaxPayload_U16
Access	const
PDO mapping	no
Data type	UNSIGNED16
Default	1490

Subindex	03h
Description	PresMaxLatency_U32
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	1000

Subindex	04h
Description	PReqActPayloadLimit_U16
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED16
Default	36

Subindex	05h
Description	PResActPayloadLimit_U16
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED16
Default	36

Subindex	06h
Description	AsndMaxLatency_U32
Access	const
PDO mapping	no
Data type	UNSIGNED32
Default	1000

Subindex	07h
Description	MultiplCycleCnt_U8
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED8
Default	0
Valuerange	ž · ^ · " % %

Subindex	08h
Description	AsyncMTU_U16
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED16
Default	300
Value range	# ž ž · ^ · ! % ž ž

4.2.1.30 1F99h: NMT_CNBasicEthernetTimeout_U32

Subindex	00h
Description	After booting, this is the maximum time in microseconds listens in mutely on the POWERLINK traffic before it decid it willswitch over to the Basic Ethernet state (no EPL traffic) Operational 1 state (with EPL traffic).
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED32
Default	5000000

4.2.1.31 1F9Bh: NMT_MultiCycleAssign_AU8

Subindex	00h
Description	Number of entries
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED8
Default	FEh
Value range	ž ! X ^ 6 5 X

Subindex	ž ! X ^ 6 5 X
Description	Cycle number
Access	rw, valid on reset
PDO mapping	no
Data type	UNSIGNED8
Default	0
Value range	0 ~ NMT_CylceTiming_REC.MultiCycleCntrU8 (the value of objec 1F98h subindex 7).

4.2.1.32 1F9Eh: NMT_ResetCmd_U8

Subindex	00h
Description	Reset command
Access	rw
PDO mapping	no
Data type	UNSIGNED8
Default	FFh

4.2.2 Parameter description of manufacturer-specific objects

See chapter [5](#)

4.3 Commissioning aids

Service software, functional module or example projects including test instructions are available as commissioning aids.

5 Parameters

Parameters are classified into classes C, E, N, S, and V can be separately reset to factory settings if necessary (see chapter [5.5.7](#)).

Parameter classes	Character
Controller parameters	C
Error memory	E
Network parameters	N
Standard parameters	S
Visualization parameters	V
Process data	PD

Chapter	starting with page
Positioning	56
Actuator	68
Limiting values	73
Visualization	78
Options	82
Controller parameters	87
Digital input/output	89
Position Control Mode	98
Device information	115
Error memory	124

5.1 Positioning

5.1.1 Sense of Rotation

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2612h
Subindex	00h

Service protocol

Read command	-
Write command	Tx

Display

Menu	PARAM CHANGE POSIT \ SenRot
------	-----------------------------

Value range

Value	Display	Service protocol	Description
0 (default)	CW	T0	Sense of rotation ascending position values with clockwise rotation
1	CCW	T1	Sense of rotation ascending position values with counterclockwise rotation

5.1.2 Spindle Pitch

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	INTEGER32
Access	rw
Object	260Dh
Subindex	00h

Service protocol

Read command	G013
Write command	H013xxxxx

Display

Menu	PARAM CHANGE POSIT \ SPitch
------	-----------------------------

Value range

Value	Display	Description
0 [^] 1000000		
0 (default)		No scaling. For calculating the position in user units, the Spindle Pitch = 1024 must be used.

5.1.3 Gear Ratio Numerator

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	INTEGER16
Access	rw
Object	260Bh
Subindex	00h

Service protocol

Read command	G010
Write command	H010xxxxx

Display

Menu	PARAM CHANGE POSIT\ GEAR N
------	----------------------------

Value range

Value	Display	Description
1 [^] 10000		
1 (default)		

5.1.4 Gear Ratio Denominator

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	INTEGER16
Access	rw
Object	260Ch
Subindex	00h

Service protocol

Read command	G011
Write command	HO11xxxxx

Display

Menu	PARAM CHANGE POSIT\ GEAR D
------	----------------------------

Value range

Value	Display	Description
1 ~ 10000		
1 (default)		

5.1.5 Pos Window

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER16
Access	rw
Object	260Ah
Subindex	00h

Service protocol

Read command	G009
Write command	H009xxxxx

Display

Menu	PARAM CHANGE POSIT\ InPoSW
------	----------------------------

Value range

Value	Display	Description
0 ~ 1000		
10 (default)		

5.1.6 Offset Value

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	261Ch
Subindex	00h

Service protocol

Read command	E05
Write command	F05+xxxxxxx

Display

Menu	PARAM CHANGE POSITION OFFSET
------	------------------------------

Value range

Value	Display	Description
-)))))) ^ ^		
0 (default)		

5.1.7 Delta Inch

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2611h
Subindex	00h

Service protocol

Read command	E04
Write command	F04+xxxxxxx

Display

Menu	PARAM CHANGE POSITION dInch
------	-----------------------------

Value range

Value	Display	Description
-! ž ž ž ž ž ž ^		
1024(default)		

5.1.8 Inpos Mode

NOTICE	Is only significant for drives without brake in the positioning open mode.
---------------	--

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2616h
Subindex	00h

Service protocol

Read command	G016
Write command	H016xxxxx

Display

Menu	PARAM CHANGE POSIT InPOS
------	--------------------------

Value range

Value	Display	Service protocol	Description
0 (default)	Cntrl	H0160000	Permanent positioning regulation to use
1	Short	H0160001	Positioning control OFF and short circuit the motor windings
2	FrEE	H0160002	Positioning control OFF and activation drive

5.1.9 Pos Type

NOTICE	Loop positioning is executed in the positioning mode only
---------------	---

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2613h
Subindex	00h

Service protocol

Read command	-
Write command	Lx

Display

Menu	PARAMCHANGE POSIT\ PoSTYP
------	---------------------------

Value range

Value	Display	Service protocol	Description
0 (default)	DIRECT	L0	Direct traveling from actual position to value.
1	POS	L1	Traveling to the target value is always positive direction to compensate for splay.
2	NEG	L2	Traveling to the target value is always negative direction to compensate for splay.

5.1.10 Loop Length

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER16
Access	rw
Object	2617h
Subindex	00h

Service protocol

Read command	G017
Write command	H017xxxxx

Display

Menu	PARAM CHANGE POSIT\ LoopLE
------	----------------------------

Value range

Value	Display	Description
0 ~ 30000		
512 (default)		

5.1.11 Calibration Value

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	260Eh
Subindex	00h

Service protocol

Read command	E03
Write command	F03+xxxxxxx

Display

Menu	PARAM CHANGE POSITV CALVAL
------	----------------------------

Value range

Value	Display	Description
-)))))) ^ ^ ^		
0 (default)		

5.1.12 Control Word

General characteristics

EEPROM	no
Class	PD
Unit	-

POWERLINK

Data type	UNSIGNED16
Access	rw
Object	2002h
Subindex	00h

Service protocol

Read command	-
Write command	-

Display

Menu	-
------	---

Data type UNSIGNED16

Value	Display	Description
-		
no default		

5.1.13 Status Word

General characteristics

EEPROM	no
Class	PD
Unit	-

POWERLINK

Data type	UNSIGNED16
Access	ro
Object	2102h
Subindex	00h

Service protocol

Read command	-
Write command	-

Display

Menu	-
------	---

Data type UNSIGNED16

Value	Display	Description
-		
no default		

5.1.14 Target Value

General characteristics

EEPROM	no
Class	PD
Unit	Positioning mode: user units Speed mode: rpm

POWERLINK

Data type	INTEGER32
Access	rw
Object	2003h
Subindex	00h

Service protocol

Read command	E00
Write command	FOO+xxxxxxx

Display

Menu	TARGET
------	--------

Data type: INTEGER32

Value	Display	Description
-		
no default		

5.1.15 Actual Value

General characteristics

EEPROM	no
Class	PD
Unit	Positioning mode: user units Speed mode: rpm

POWERLINK

Data type	INTEGER32
Access	ro
Object	2103h
Subindex	00h

Service protocol

Read command	Z
Write command	-

Display

Menu	Line1
------	-------

Data type: INTEGER32

Value	Display	Description
-		
no default		

5.1.16 System Status Word

General characteristics

EEPROM	no
Class	-
Unit	-

POWERLINK

Datatype	UNSIGNED16
Access	ro
Object	2A0Ch
Subindex	00h

Service protocol

Read command	R
Write command	-

Display

Menu	-
------	---

Data type UNSIGNED16

Bit	State	Description
Bit 0	0	Irrelevant
Bit 1	0	Irrelevant
Bit 2	0	Irrelevant
Bit 3		Operating mode: Positioning mode: In Position
	1	Actual position is within the positioning window of the programmed target value.
	0	Actual position is outside the positioning window of the programmed target value.
		Operating mode: Speed mode: In Position
	1	Actual speed is inside the specified tolerance window of target speed.
	0	Actual speed is outside the specified tolerance window.
Bit 4		Actuator travels
	1	Actuator travels
	0	Actuator stands still (rotational speed < 2 rpm)
Bit 5		Operating mode: Positioning mode: Upper limit
	1	Actual position is above the programmed limiting value. Travel possible only in negative direction in inoperation
	0	Actual position is below the programmed limiting value.
	0	Operating mode: Positioning mode: Irrelevant
Bit 6		Operating mode: Positioning mode: Lower limit
	1	Actual position is below the programmed limiting value. Travel possible only in positive direction in inoperation
	0	Actual position is above the programmed limiting value.
	0	Operating mode: Positioning mode: Irrelevant
Bit 7		Driver state:
	1	Motor is activated
	0	Motor in control

Bit	State	Description
Bit 8		Error:
	1	Actuator has switched to error. The cause of the error must be acknowledged.
	0	No error present
Bit 9		Operating mode: Positioning mode: Loop travel
	1	If travel direction unequal start direction (with loop travel).
	0	If travel direction equal start direction.
Bit 10		Operating mode: Positioning mode: Irrelevant
	1	Output stage operating voltage
	0	No voltage, no travelling possible
Bit 11		Voltage applied
	1	Ready for travel:
	0	Not ready for travel
Bit 12		Ready for travel: Actuator not in error state No active positioning Operating voltage of the output stage is applied Actual position within limits (only positioning mode)
	0	Irrelevant
	1	Current limiting:
Bit 13		Current limiting active.
	0	Current limiting not active.
	1	Operating mode: Positioning mode: Status
Bit 14		Positioning active in positioning mode.
	0	Positioning inactive.
		Operating mode: Speed mode: Status
	1	Enable target speed
	0	Target speed disabled
Bit 15		Contouring error:
	1	Contouring error: the actuator cannot reach the preset speed due to too high load. The actuator switches the contouring error flag. Remedy: reduce programmed speed!
	0	No contouring error: actual speed corresponds with required
no default		

Table 6: System Status Word

The system status word consists of 2 bytes and reflects the state of the drive.

High Byte								Low Byte							
Bit number															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	1	0	0	1	0	1	0	0	1	0	0	0
2				9				4				8			

Fig. 17: Structure of the system status word

Example (gray background):

binary: 1 0010 1001 0100 1000

hex: 1 2 9 4 8

5.2 Actuator

5.2.1 Operating Mode

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2614h
Subindex	00h

Service protocol

Read command	-
Write command	X0 / X1

Display

Menu	PARAMCHANGE DRIVE\OPModE
------	--------------------------

Value range

Value	Display	Service protocol	Description
0 (default)	POS	X0	Positioning mode
1	VEL	X1	Speed mode

5.2.2 A-Pos

General characteristics

EEPROM	yes
Class	C
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2604h
Subindex	00h

Service protocol

Read command	G003
Write command	H003xxxxx

Display

Menu	PARAM CHANGE\DRIVE\ A POS
------	---------------------------

Value range

Value	Display	Description
!		
50 (default)		

5.2.3 V-Pos

General characteristics

EEPROM	yes
Class	C
Unit	U/min

POWERLINK

Data type	INTEGER16
Access	rw
Object	2605h
Subindex	00h

Service protocol

Read command	G004
Write command	H004xxxxx

Display

Menu	PARAM CHANGE\DRIVE\ V POS
------	---------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.2.4 D-Pos

General characteristics

EEPROM	yes
Class	C
Unit	%, 100% 4U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2606h
Subindex	00h

Service protocol

Read command	G044
Write command	H044xxxxx

Display

Menu	PARAM CHANGE\DRIVE\ D POS
------	---------------------------

Value range

Value	Display	Description
! ^ ' ! ž !		101% = the delay is determined by -Pos parameter.
101 (default)		

5.2.5 A-Inch

General characteristics

EEPROM	yes
Class	C
Unit	%, 100% 4U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2608h
Subindex	00h

Service protocol

Read command	G007
Write command	H007xxxxx

Display

Menu	PARAM CHANGE DRIVE \ A INCH
------	-----------------------------

Value range

Value	Display	Description
!		
50 (default)		

5.2.6 V-Inch

General characteristics

EEPROM	yes
Class	C
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2609h
Subindex	00h

Service protocol

Read command	G008
Write command	H008xxxxx

Display

Menu	PARAM CHANGE DRIVE \ V INCH
------	-----------------------------

Value range

Value	Display	Description
i=30.6: ↑ ↓ ! % ž Y - % ž † ž * ' ! Y - ' ž † (* ' !		
10 (default)		

5.2.7 Inching 2 Offset

General characteristics

EEPROM	no
Class	S
Unit	%

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	261Ah
Subindex	00h

Service protocol

Read command	G027
Write command	H027xxxxx

Display

Menu	PARAM CHANGE\DRIVE\ OFFIn2
------	----------------------------

Value range

Value	Display	Description
10 [^] 100		
100 (default)		

5.2.8 A-Rot

General characteristics

EEPROM	yes
Class	C
Unit	%, 100% 4U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2607h
Subindex	00h

Service protocol

Read command	G005
Write command	H005xxxxx

Display

Menu	PARAM CHANGE\DRIVE\ A ROT
------	---------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.3 Limiting values

5.3.1 Software Limit 1

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	260Fh
Subindex	00h

Service protocol

Read command	E01
Write command	F01±xxxxxxx

Display

Menu	PARAM CHANG&BOUNDS SwLIM1
------	---------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
999999 (default)		

5.3.2 Software Limit 2

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2610h
Subindex	00h

Service protocol

Read command	E02
Write command	F02±xxxxxxxx

Display

Menu	PARAMCHANGE BOUNDS SwLIM2
------	---------------------------

Value range

Value	Display	Description
-" ž) ' ! % " ' ^		
-199999 (default)		

5.3.3 Peak Current Limit

General characteristics

EEPROM	yes
Class	S
Unit	mA

POWERLINK

Data type	INTEGER16
Access	rw
Object	2241h
Subindex	00h

Service protocol

Read command	G080
Write command	H080xxxxx

Display

Menu	PARAM CHANGE BOUNDS PKCurL
------	----------------------------

Value range

Value	Display	Description
0^ 12000		
12000(default)		

5.3.4 Peak Current Time

General characteristics

EEPROM	yes
Class	S
Unit	x100ms

POWERLINK

Data type	INTEGER16
Access	rw
Object	2242h
Subindex	00h

Service protocol

Read command	G081
Write command	H081xxxxx

Display

Menu	PARAM CHANG&BOUNDS PKCurT
------	---------------------------

Value range

Value	Display	Description
0 [^] 40		
40(default)		

5.3.5 Continuous Current

General characteristics

EEPROM	yes
Class	S
Unit	mA

POWERLINK

Data type	INTEGER16
Access	rw
Object	2243h
Subindex	00h

Service protocol

Read command	G082
Write command	H082xxxxx

Display

Menu	PARAM CHANG&BOUNDS CoCurL
------	---------------------------

Value range

Value	Display	Description
0 ~ 7500		
7500(default)		

5.3.6 Contouring Error Limit

General characteristics

EEPROM	yes
Class	S
Unit	Steps

POWERLINK

Data type	INTEGER16
Access	rw
Object	2618h
Subindex	00h

Service protocol

Read command	G018
Write command	H018xxxxx

Display

Menu	PARAM CHANGBOUNDS CoErrL
------	--------------------------

Value range

Value	Display	Description
1 ~ 30000		
1024(default)		

5.3.7 Travel Against Load Trigger

General characteristics

EEPROM	yes
Class	S
Unit	mA

POWERLINK

Data type	INTEGER16
Access	rw
Object	2801h
Subindex	00h

Service protocol

Read command	G070
Write command	H070xxxxx

Display

Menu	PARAM CHANGEBOUNDS TALTrG
------	---------------------------

Value range

Value	Display	Description
0 ~ 7500		
0 (default)		Load approach function deactivated

5.3.8 Travel Against Load Direction

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2802h
Subindex	00h

Service protocol

Read command	G071
Write command	H071xxxxx

Display

Menu	PARAM CHANGEBOUNDS TALDir
------	---------------------------

Value range

Value	Display	Description
0 (default)	POS	positive sense of rotation
1	NEG	negative sense of rotation

5.4 Visualization

5.4.1 Display Orientation

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2703h
Subindex	00h

Service protocol

Read command	G030
Write command	H030xxxxx

Display

Menu	PARAM CHANGE\VISUAL\ DISP O
------	-----------------------------

Value range

Value	Display	Description
0 (default)	0	Orientation 0°
1	180	Orientation 180°

5.4.2 Display Divisor

Divisor diminishing the display accuracy vs the measurement resolution.

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2701h
Subindex	00h

Service protocol

Read command	G031
Write command	H031xxxxx

Display

Mem	PARAMCHANGE VISUAL\ DIV
-----	-------------------------

Value range

Value	Display	Divisor
0 (default)	1	1
1	10	10
2	100	100
3	1000	1000

5.4.3 Display Divisor Application

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2702h
Subindex	00h

Service protocol

Read command	G035
Write command	H035xxxxx

Display

Mem	PARAM CHANGE VISUAL\ DIVAPL
-----	-----------------------------

Value range

Value	Display	Description
0 (default)	ALL	Application to the displayed value and the true value of target and actual positions.
1	DISPL	Application only to the displayed value of the target and positions.

5.4.4 Decimal Places

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2704h
Subindex	00h

Service protocol

Read command	G032
Write command	H032xxxxx

Display

Menu	PARAM CHANGE\VISUAL\ dECI P
------	-----------------------------

Value range

Value	Display	Number of decimal place
0 (default)	0	0
1	0.1	1
2	0.02	2
3	0.003	3
4	0.0004	4

5.4.5 Direction Indication Function

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2705h
Subindex	00h

Service protocol

Read command	G033
Write command	H033xxxxx

Display

Menu	PARAM CHANGE\VISUAL\ IndIcF
------	-----------------------------

Value range

Value	Display	Description
0 (default)	ON	On
1	InVErt	inverted
2	OFF	Off

5.4.6 Displayed Value 2nd Line

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2706h
Subindex	00h

Service protocol

Read command	G043
Write command	H043xxxx

Display

Menu	PARAMCHANGE VISUAL \ LinE2
------	----------------------------

Value range

Value	Display	Description	Chapter
0 (default)	TARGET	Target Value	5.1.14
1	OS DEG	Output Stage Temperature	5.9.1
2	VM DEG	Virtual Motor Temperature	5.9.2
3	C VOLT	Voltage of Control	5.9.3
4	P VOLT	Voltage of Output Stage	5.9.4
5	MotCur	Motor Current	5.9.5
6	POS	Actual Position	5.9.6
7	VEL	Actual Rotational Speed	5.9.7
8	OVLOAD	Overload	5.9.8
9	ConErr	Actual Contouring Error	5.9.9

5.5 Options

5.5.1 Key Enable Time

General characteristics

EEPROM	yes
Class	V
Unit	s

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2707h
Subindex	00h

Service protocol

Read command	G029
Write command	H029xxxxx

Display

Menu	PARAM CHANGE OPTION CdELAY
------	----------------------------

Value range

Value	Display	Description
1 ~ 60		
3 (default)		

5.5.2 Key Function Enable

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2708h
Subindex	00h

Service protocol

Read command	G028
Write command	H028xxxxx

Display

Mem	PARAM CHANGE OPTION, bUTTON
-----	-----------------------------

Value range

Value	Display	Description
0 (default)	ON	All functions enabled via key
1	OFF	All functions disabled via key

5.5.3 Inching 2 Acceleration Type

The acceleration type in Inching operation 2 can be influenced via this parameter

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	261Bh
Subindex	00h

Service protocol

Read command	G039
Write command	H039xxxxx

Display

Mem	PARAM CHANGE OPTION, AccTYP
-----	-----------------------------

Value range

Value	Display	Description
0 (default)	StAt	Static acceleration Acceleration occurs to final speed as defined under parameter-A Inch (see chapter 5.2.5).
1	dYN	Incremental acceleration Acceleration occurs to final speed as defined under parameter-A Inch (see chapter 5.2.5) with the following increments 4 s to 20% of final speed 2 s to 50% of final speed 1 s to 100% of final speed

5.5.4 Inching 2 Stop Mode

The delay ramp in Inching operation 2 can be influenced via this parameter

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2615h
Subindex	00h

Service protocol

Read command	G015
Write command	H015xxxxx

Display

Menu	PARAM CHANGE OPTION StoP2
------	---------------------------

Value range

Value	Display	Description
0 (default)	HARd	Stop with maximum delay
1	SOFT	Stop with programmed delay

5.5.5 PIN Change

Required PIN to enable changing of parameters via keys and display.

General characteristics

EEPROM	yes
Class	V
Unit	-

POWERLINK

Data type	INTEGER32
Access	rw
Object	2709h
Subindex	00h

Service protocol

Read command	G041
Write command	H041xxxxx

Display

Menu	PARAM CHANGE OPTION PIN
------	-------------------------

Value range

Value	Display	Description
0 ~ 99999		
0 (default)		

5.5.6 Generic Mapping Parameter

This parameter defines the content of the Generic Mapping Channel, which is a component of the process data.

General characteristics

EEPROM	yes
Class	N
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2222h
Subindex	00h

Service protocol

Read command	G160
Write command	H160xxxxx

Display

Menu	PARAM CHANGE OPTION GENMAP
------	----------------------------

Value range

Value	Display	Description	Chapter
0 (default)	TARGET	Target Value	5.1.14
1	OS DEG	Output Stage Temperature	5.9.1
2	VM DEG	Virtual Motor Temperature	5.9.2
3	C VOLT	Voltage of Control	5.9.3
4	P VOLT	Voltage of Output Stage	5.9.4
5	MotCur	Motor Current	5.9.5
6	POS	Actual Position	5.9.6
7	VEL	Actual Rotational Speed	5.9.7
8	OVLOAD	Overload	5.9.8
9	ConErr	Actual Contouring Error	5.9.9
10	ERROR	Actual Error	3.3.2.1

5.5.7 Configuration

This parameter configures various functions of the actuator.

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED16
Access	rw
Object	2B21h
Subindex	00h

Service protocol

Read command	G061
Write command	H061xxxxx

Display

Menu	PARAM CHANGE OPTION CONFIG
------	----------------------------

Value range

Bit	Description
0 [^] #	Reserved, always
\$ [^] #	Reserved, always
6	Auto reset in the EXCEPTION state 0 =switched off (default): In the EXCEPTION state, the drive stops participating in network traffic and longer be addressed. To exit this state, a Power On Reset is required 1 =switched on In the EXCEPTION state, the drive automatically performs a reset. At the EXCEPTION fault is triggered.
7 [^] 15	Reserved, always

5.5.8 S-Command

General characteristics

EEPROM	no
Class	-
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2C01h
Subindex	00h

Service protocol

Read command	-
Write command	Sxxxxx / K

Display

Menu	PARAM CHANGE OPTION LOADP
------	---------------------------

Value range

Value	Display	Service protocol	Description
0	NO	-	No function
1	ALL	S11100	Reset all parameters (C, N, S, and V) to factory settings
2	StAnd	S11101	Reset only standard parameters (Class E) to factory settings
3	CONTR	S11102	Reset only controller parameters (Class E) to factory settings
4	VISUAL	S11003	Reset only visualization parameters (Class E) to factory settings
5	NETW	S11004	Reset only network parameters (Class E) to factory settings
6	AckErr	S11103	Acknowledge error
7	CALIB	S11104	Calibrate
8	dLErr	S11105	Delete error memory (Class E)
9	RESET	K	Execute soft start
no default			

5.6 Controller parameter

5.6.1 Controller Parameter P

The setting applies to all operating modes.

General characteristics

EEPROM	yes
Class	C
Unit	-

POWERLINK

Data type	INTEGER16
Access	rw
Object	2601h
Subindex	00h

Service protocol

Read command	G000
Write command	H000xxxxx

Display

Menu	PARAM CHANGECONTR CPAr P
------	--------------------------

Value range

Value	Display	Description
1 ~ 500		
300 (default)		

5.6.2 Controller Parameter I

The setting applies to all operating modes.

General characteristics

EEPROM	yes
Class	C
Unit	-

POWERLINK

Data type	INTEGER16
Access	rw
Object	2602h
Subindex	00h

Service protocol

Readcommand	G001
Write command	H001xxxxx

Display

Menu	PARAM CHANGECONTR CPAr I
------	--------------------------

Value range

Value	Display	Description
0 ~ 500		
2 (default)		

5.6.3 Controller Parameter D

The setting applies to all operating modes.

General characteristics

EEPROM	yes
Class	C
Unit	-

POWERLINK

Data type	INTEGER16
Access	rw
Object	2603h
Subindex	00h

Service protocol

Read command	G002
Write command	H002xxxxx

Display

Menu	PARAM CHANGE CONTR CPAr D
------	---------------------------

Value range

Value	Display	Description
0 ~ 500		
0 (default)		

5.7 Digital input/output

5.7.1 Digital Input 1 Functionality

This parameter determines the functionality of digital input 1
With a value greater than 0 set, a function is assigned to the digital input

The functional state can be read from the Digital Input Functional State register

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2401h
Subindex	00h

Service protocol

Read command	G049
Write command	HO49xxxxx

Display

Menu	PARAM CHANGE DIG IO \ F DI 1
------	------------------------------

Value range

Value	Display	Description
0 (default)	GENERL	General use No function is assigned to the digital input
1	LIMSw1	Limit switch
2	LIMSw2	Limit switch
3	INch2P	Inching operation positive direction
4	INch2N	Inching operation negative direction
5	CALib	Calibrate
6	AcKErr	Acknowledge error
7	INch1	Inching operation 1, direction as programmed
8	PCMAbs	PCM Start absolute
9	PCMIN1	PCM Input 1
10	PCMIN2	PCM Input 2
11	PCMIN3	PCM Input 3
12	INch1P	Inching operation positive direction
13	INch1N	Inching operation negative direction
14	PCMREL	PCM Start relative
15	RESET	Run warm start

Table 7: Configuration of digital inputs

5.7.2 Digital Input 2 Functionality

This parameter determines the functionality of digital input 2.

With a value greater than 0 set, a function is assigned to the digital input.

The functional state can be read from the Digital Input Functionalities State register.

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Datatype	UNSIGNED8
Access	rw
Object	2402h
Subindex	00h

Service protocol

Read command	G050
Write command	H050xxxxx

Display

Menu	PARAM CHANGE DIG IO \ F DI 2
------	------------------------------

Value range

Value	Display	Description
z · ^ · ! %		
0 (default)		

Description, see [Table 7](#).

5.7.3 Digital Input 3 Functionality

This parameter determines the functionality of digital input 3. With a value greater than 0 set, a function is assigned to the digital input.

The functional state can be read from the Digital Input Functionalities State register.

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2403h
Subindex	00h

Service protocol

Read command	G051
Write command	H051xxxxx

Display

Menu	PARAM CHANGE DIG IO \ F DI 3
------	------------------------------

Value range

Value	Display	Description
z · ^ · ! %		
0 (default)		

Description, see [Table 7](#).

5.7.4 Digital Input 4 Functionality

This parameter determines the functionality of digital input 4

With a value greater than 0 set, a function is assigned to the digital input

The functional state can be read from the Digital Input Functionalities State register

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2404h
Subindex	00h

Service protocol

Read command	G052
Write command	H052xxxxx

Display

Menu	PARAM CHANGE DIG IO \ F DI 4
------	------------------------------

Value range

Value	Display	Description
0		
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		
69		
70		
71		
72		
73		
74		
75		
76		
77		
78		
79		
80		
81		
82		
83		
84		
85		
86		
87		
88		
89		
90		
91		
92		
93		
94		
95		
96		
97		
98		
99		
100		
101		
102		
103		
104		
105		
106		
107		
108		
109		
110		
111		
112		
113		
114		
115		
116		
117		
118		
119		
120		
121		
122		
123		
124		
125		
126		
127		
128		
129		
130		
131		
132		
133		
134		
135		
136		
137		
138		
139		
140		
141		
142		
143		
144		
145		
146		
147		
148		
149		
150		
151		
152		
153		
154		
155		
156		
157		
158		
159		
160		
161		
162		
163		
164		
165		
166		
167		
168		
169		
170		
171		
172		
173		
174		
175		
176		
177		
178		
179		
180		
181		
182		
183		
184		
185		
186		
187		
188		
189		
190		
191		
192		
193		
194		
195		
196		
197		
198		
199		
200		
201		
202		
203		
204		
205		
206		
207		
208		
209		
210		
211		
212		
213		
214		
215		
216		
217		
218		
219		
220		
221		
222		
223		
224		
225		
226		
227		
228		
229		
230		
231		
232		
233		
234		
235		
236		
237		
238		
239		
240		
241		
242		
243		
244		
245		
246		
247		
248		
249		
250		
251		
252		
253		
254		
255		

Description, see [Table 7](#).

5.7.5 Digital Inputs Polarity

This parameter determines the switching behavior individually for every digital input
A bit that defines the switching logics is assigned to every digital input

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2406h
Subindex	00h

Service protocol

Read command	G054
Write command	H054xxxxx

Value range

Bit	Menu	Description
0	PARAM CHANGE DIG IO \ P DI 1	Digital input 1 polarity
1	PARAM CHANGE DIG IO \ P DI 2	Digital input 2 polarity
2	PARAM CHANGE DIG IO \ P DI 3	Digital input 3 polarity
3	PARAM CHANGE DIG IO \ P DI 4	Digital input 4 polarity
4 - 7		Not assigned

Bit-Wert	Display	Description
0 (default)	HIGH	positive logics
1	LOW	negative logics

5.7.6 Digital Input Functionalities State

The states of the digital inputs are mapped in this register according to the functionalities set. A bit is assigned to every function

General characteristics

EEPROM	no
Class	-
Unit	-

POWERLINK

Data type	UNSIGNED32
Access	Get
Object	2405h
Subindex	00h

Service protocol

Read command	U1029
Write command	-

Display

Menu	-
------	---

Value range

Bit	Description
0	Limit switch
1	Limit switch
2	Inching operation positive direction

Bit	Description
3	Inching operation 2 negative direction
4	Calibrate
5	Acknowledge error
6	Inching operation direction as programmed
7	PCM Start absolut
8	PCMInput1
9	PCMInput2
10	PCMInput3
11	Inching operation positive direction
12	Inching operation negative direction
13	PCM Start relativ
14	Execute soft start
15^ 31	Not assigned
no default	

Table 8: States of the digital inputs

5.7.7 Digital Inputs State

General characteristics

Default	no
EEPROM	no
Class	PD
Unit	-

POWERLINK

Data type	UNSIGNED16
Access	Get
Object	2101h
Subindex	00h

Service protocol

Read command	B005 (decimal notation)
Write command	-

Display

Menu	PARAM RoPARADI4321
------	--------------------

Data type UNSIGNED16

Bit	Description
0	State of digital input
1	State of digital input
2	State of digital input
3	State of digital input

Bit	Description
\$ ^ ^ ! 9	Not assigned
no default	

5.7.8 Digital Output 1 Functionality

This parameter determines the function of digital output 1

This setting determines the bit position in the Digital Outputs Status register, which governs the state of the digital output

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2301h
Subindex	00h

Service protocol

Read command	G046
Write command	H046xxxxx

Display

Menu	PARAM CHANGE DIG IO \ F DO 1
------	------------------------------

Value range

Value	Display	Description
0 (default)	GENERL	General use Control of the control output is directly via bit DO1 in the data
1	FAULT	The output is switched active in case of fault
2	INPOS	The state of bit Inpos in the status word defines the state of the digital output
3	ON	The output is switched on permanently
4	OP EN	The output is active in the Operation enabled status
5	NOTMOV	Drive is idle

5.7.9 Digital Outputs Polarity

This parameter determines the switching behavior individually for every digital output. A bit that defines the switching logics is assigned to every digital output.

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2303h
Subindex	00h

Service protocol

Read command	G048
Write command	H048xxxxx

Value range

Bit	Menu	Description
0	PARAM CHANGE DIG IO \ P DO 1	Digital output 1 polarity
1 ^ 7		Not assigned

Bit value	Display	Description
0 (default)	HIGH	positive logics
1	LOW	negative logics

5.7.10 Digital Output Functionalities State

The functional states that can be assigned to the digital output can be read from this register.

General characteristics

EEPROM	no
Class	-
Unit	-

POWERLINK

Data type	UNSIGNED32
Access	ro
Object	2302h
Subindex	00h

Service protocol

Read command	U0770
Write command	-

Display

Menu	-
------	---

Value range

Bit	Description
0	Error 0 =no error 1 =error active
1	Inpos 0 =actual value outside the positioning window 1 =actual value inside the positioning window
2	Output on The bit is permanently set
3	Operation enabled 0 =operation not enabled 1 =operation enabled
4	Drive stands still 0 =Drive does not stand still 1 =drivestands still
5 [^] 31	Not assigned
no default	

5.7.11 Digital Outputs Control

General characteristics

EEPROM	no
Class	PD
Unit	-

POWERLINK

Data type	UNSIGNED16
Access	rw
Object	2001h
Subindex	00h

Service protocol

Read command	G060
Write command	H060xxxxx

Display

Menu	-
------	---

Value range

Bit	Description
0	Digital output
1 ^ 15	Reserved, always 0
no default	

5.7.12 Service Interface Baud Rate

General characteristics

EEPROM	yes
Class	S
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	rw
Object	2221h
Subindex	00h

Service protocol

Read command	G025
Write command	H025xxxx

Display

Menu	PARAM CHANGE DIG IOX BAUD
------	---------------------------

Value range

Value	Display	Description
0	19.2	19.2kBit/s
1 (default)	57.6	57.6kBit/s
2	115.2	115.2kBit/s
3	9.6	9.6kBit/s

5.8 Position Control Mode

5.8.1 PCM Position 1

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2922h
Subindex	00h

Service protocol

Read command	E10
Write command	F10+xxxxxxx

Display

Menu	PARAM CHANGE\PCM\PCM SET\ POS 1
------	---------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.2 PCM Position 2

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2923h
Subindex	00h

Service protocol

Read command	E11
Write command	F11+xxxxxxx

Display

Menu	PARAM CHANGE\PCM\PCM SET\ POS 2
------	---------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.3 PCM Position 3

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2924h
Subindex	00h

Service protocol

Read command	E12
Write command	F12+xxxxxxx

Display

Menu	PARAM CHANGE PCM PCM SET POS 3
------	--------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.4 PCM Position 4

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2925h
Subindex	00h

Service protocol

Read command	E13
Write command	F13+xxxxxxx

Display

Menu	PARAM CHANGE PCM PCM SET POS 4
------	--------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.5 PCM Position 5

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2926h
Subindex	00h

Service protocol

Read command	E14
Write command	F14+xxxxxxx

Display

Menu	PARAM CHANGE PCM PCM SET POS 5
------	--------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.6 PCM Position 6

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2927h
Subindex	00h

Service protocol

Read command	E15
Write command	F15+xxxxxxx

Display

Menu	PARAM CHANGE PCM PCM SET POS 6
------	--------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.7 PCM Position 7

General characteristics

EEPROM	yes
Class	S
Unit	User units

POWERLINK

Data type	INTEGER32
Access	rw
Object	2928h
Subindex	00h

Service protocol

Read command	E16
Write command	F16+xxxxxxx

Display

Menu	PARAM CHANGE PCM PCM SET POS 7
------	--------------------------------

Value range

Value	Display	Description
- " ž) ' ! % " ' ^		
0 (default)		

5.8.8 PCM Acceleration 1

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2942h
Subindex	00h

Service protocol

Read command	G100
Write command	H100xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \ACC 1
------	---------------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.8.9 PCM Acceleration 2

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2943h
Subindex	00h

Service protocol

Read command	G101
Write command	H101xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \ACC 2
------	---------------------------------

Value range

Value	Display	Description
1 ^ 100		
50(default)		

5.8.10 PCM Acceleration 3

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2944h
Subindex	00h

Service protocol

Read command	G102
Write command	H102xxxxx

Display

Menu	PARAMCHANGE PCM PCM SET\3ACC 3
------	--------------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.8.11 PCM Acceleration 4

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2945h
Subindex	00h

Service protocol

Read command	G103
Write command	H103xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET\4ACC 4
------	---------------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.8.12 PCM Acceleration 5

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2946h
Subindex	00h

Service protocol

Read command	G104
Write command	H104xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET VACC 5
------	---------------------------------

Value range

Value	Display	Description
1 ^ 100		
50(default)		

5.8.13 PCM Acceleration 6

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2947h
Subindex	00h

Service protocol

Read command	G105
Write command	H105xxxxx

Display

Menu	PARAMCHANGE PCM PCM SET\6ACC 6
------	--------------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.8.14 PCM Acceleration 7

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2948h
Subindex	00h

Service protocol

Read command	G106
Write command	H106xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET\7ACC 7
------	---------------------------------

Value range

Value	Display	Description
1 ^ 100		
50 (default)		

5.8.15 PCM Velocity 1

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2962h
Subindex	00h

Service protocol

Read command	G120
Write command	H120xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \VEL 1
------	---------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.16 PCM Velocity 2

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2963h
Subindex	00h

Service protocol

Read command	G121
Write command	H121xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \VEL 2
------	---------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.17 PCM Velocity 3

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2964h
Subindex	00h

Service protocol

Read command	G122
Write command	H122xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET VEL 3
------	--------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.18 PCM Velocity 4

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2965h
Subindex	00h

Service protocol

Read command	G123
Write command	H123xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET VEL 4
------	--------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.19 PCM Velocity 5

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2966h
Subindex	00h

Service protocol

Readcommand	G124
Write command	H124xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET VEL 5
------	--------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.20 PCM Velocity 6

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2967h
Subindex	00h

Service protocol

Read command	G125
Write command	H125xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \VEL 6
------	---------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.21 PCM Velocity 7

General characteristics

EEPROM	yes
Class	S
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	rw
Object	2968h
Subindex	00h

Service protocol

Read command	G126
Write command	H126xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \VEL 7
------	---------------------------------

Value range

Value	Display	Description
Y - # ž † & * ' !		
Y - % ž † ž * ' !		
Y - ' ž † (* ' !		
10 (default)		

5.8.22 PCM Deceleration 1

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2982h
Subindex	00h

Service protocol

Read command	G140
Write command	H140xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET\1DEC 1
------	---------------------------------

Value range

Value	Display	Description
! ^ ^ ! ž !		101% = the delay is determined by the PCM Acceleration 1 parameter.
101 (default)		

5.8.23 PCM Deceleration 2

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2983h
Subindex	00h

Service protocol

Read command	G141
Write command	H141xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET\2DEC 2
------	---------------------------------

Value range

Value	Display	Description
! ^ ! ž !		101% = the delay is determined by the Acceleration 2 parameter.
101 (default)		

5.8.24 PCM Deceleration 3

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2984h
Subindex	00h

Service protocol

Read command	G142
Write command	H142xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET DEC 3
------	--------------------------------

Value range

Value	Display	Description
! ^ ! ž !		101% = the delay is determined by the Acceleration 3 parameter.
101 (default)		

5.8.25 PCM Deceleration 4

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2985h
Subindex	00h

Service protocol

Read command	G143
Write command	H143xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \DEC 4
------	---------------------------------

Value range

Value	Display	Description
! 0 100 ! ž !		101% = the delay is determined by the Acceleration 4 parameter.
101(default)		

5.8.26 PCM Deceleration 5

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2986h
Subindex	00h

Service protocol

Read command	G144
Write command	H144xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \DEC 5
------	---------------------------------

Value range

Value	Display	Description
! 0 100 ! ž !		101% = the delay is determined by the Acceleration 5 parameter.
101 (default)		

5.8.27 PCM Deceleration 6

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2987h
Subindex	00h

Service protocol

Read command	G145
Write command	H145xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \DEC 6
------	---------------------------------

Value range

Value	Display	Description
! ^ . ! ž !		101% = the delay determined by the PCM Acceleration 6 parameter.
101 (default)		

5.8.28 PCM Deceleration 7

General characteristics

EEPROM	yes
Class	S
Unit	%, 100% 4 U/s ²

POWERLINK

Data type	INTEGER16
Access	rw
Object	2988h
Subindex	00h

Service protocol

Read command	G146
Write command	H146xxxxx

Display

Menu	PARAM CHANGE PCM PCM SET \DEC 7
------	---------------------------------

Value range

Value	Display	Description
! ^ ! ž !		101% = the delay is determined by the Acceleration 7 parameter.
101 (default)		

5.9 Device information

5.9.1 Output Stage temperature

General characteristics

EEPROM	no
Class	-
Unit	1/10°C

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A01h
Subindex	00h

Service protocol

Read command	B000
Write command	-

Display

Menu	PARAM RoPARAOS DEG
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.2 Virtual Motor Temperature

Motor temperature based on a thermal model.

General characteristics

EEPROM	no
Class	-
Unit	1/10°C

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A0Fh
Subindex	00h

Service protocol

Read command	B007
Write command	-

Display

Menu	PARAM RoPARAM DEG
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.9.3 Voltage of Control

General characteristics

EEPROM	no
Class	-
Unit	1/10V

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A02h
Subindex	00h

Service protocol

Read command	B001
Write command	-

Display

Menu	PARAM RoPARAC VOLT
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.4 Voltage of Output Stage

General characteristics

EEPROM	no
Class	-
Unit	1/10V

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A03h
Subindex	00h

Service protocol

Read command	B002
Write command	-

Display

Menu	PARAM RoPARAM VOLT
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.5 Motor Current

General characteristics

EEPROM	no
Class	-
Unit	mA

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A05h
Subindex	00h

Service protocol

Read command	B004
Write command	-

Display

Menu	PARAM RoPARAMotCur
------	--------------------

Value range

Value	Display	Description
-		
nodefult		

5.9.6 Actual Position

General characteristics

EEPROM	no
Class	-
Unit	User units

POWERLINK

Data type	INTEGER32
Access	ro
Object	2A06h
Subindex	00h

Service protocol

Read command	Z
Write command	-

Display

Menu	PARAM RoPARAPOS
------	-----------------

Value range

Value	Display	Description
-		
no default		

5.9.7 Actual Rotational Speed

General characteristics

EEPROM	no
Class	-
Unit	rpm

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A07h
Subindex	00h

Service protocol

Read command	V
Write command	-

Display

Menu	PARAM RoPARAVEL
------	-----------------

Value range

Value	Display	Description
-		
no default		

5.9.8 Overload

General characteristics

EEPROM	no
Class	-
Unit	%

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2A10h
Subindex	00h

Service protocol

Read command	B008
Write command	-

Display

Menu	PARAM RoPARAOVLOAD
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.9 Actual Contouring Error

General characteristics

EEPROM	no
Class	-
Unit	Steps

POWERLINK

Data type	INTEGER32
Access	ro
Object	2A11h
Subindex	00h

Service protocol

Read command	E99
Write command	-

Display

Menu	PARAM RoPARAConErr
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.10 Gear Reduction

General characteristics

EEPROM	yes
Class	-
Unit	-

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A0Bh
Subindex	00h

Service protocol

Read command	A4
Write command	-

Display

Menu	PARAM RoPARAREduc
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.9.11 Encoder Resolution

General characteristics

EEPROM	yes
Class	-
Unit	Steps

POWERLINK

Data type	INTEGER16
Access	ro
Object	2A0Dh
Subindex	00h

Service protocol

Read command	G034
Write command	-

Display

Menu	PARAM RoPARÆEncRES
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.12 Serial Number

General characteristics

EEPROM	yes
Class	-
Unit	-

POWERLINK

Data type	INTEGER32
Access	ro
Object	2A08h
Subindex	00h

Service protocol

Read command	A5
Write command	-

Display

Menu	PARAM RoPARÆEr No
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.9.13 SW Motorcontroller

General characteristics

EEPROM	yes
Class	-
Unit	-

POWERLINK

Data type	INTEGER32
Access	ro
Object	2AOAh
Subindex	00h

Service protocol

Read command	A1
Write command	-

Display

Menu	PARAM RoPARAVERDrv
------	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.14 SW Ethernet Module

General characteristics

EEPROM	yes
Class	-
Unit	-

POWERLINK

Data type	-
Access	-
Object	-
Subindex	-

Service protocol

Read command	A2
Write command	-

Display

Mem	PARAM RoPARAVERMod
-----	--------------------

Valuerange

Value	Display	Description
-		
no default		

5.9.15 Production Date

General characteristics

EEPROM	yes
Class	-
Unit	DDMMJJJJ

POWERLINK

Data type	INTEGER32
Access	ro
Object	2A09h
Subindex	00h

Service protocol

Read command	A6
Write command	-

Display

Mem	PARAM RoPARADtProd
-----	--------------------

Value range

Value	Display	Description
-		
no default		

5.9.16 Device ID

General characteristics

EEPROM	yes
Class	-
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2A0Eh
Subindex	00h

Service protocol

Readcommand	-
Write command	-

Display

Menu	-
------	---

Value range

Value	Display	Description
3		AG24

5.9.17 Generic Mapping Channel

Device information can be transmitted in the Generic Mapping Channel (see chapter 5.5.6).

General characteristics

EEPROM	no
Class	PD
Unit	-

POWERLINK

Data type	INTEGER32
Access	ro
Object	2104h
Subindex	00h

Service protocol

Read command	-
Write command	-

Display

Menu	-
------	---

Value range

Value	Display	Description
-		
no default		

5.10 Error memory

5.10.1 Number of Errors

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B01h
Subindex	00h

Service protocol

Read command	J00
Write command	-

Display

Menu	PARAM ErrBùErr No
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.2 Error Number 1

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B02h
Subindex	00h

Service protocol

Read command	J01
Write command	-

Display

Mem	PARAM ErrBüErr 01
-----	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.3 Error Number 2

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B03h
Subindex	00h

Service protocol

Read command	J02
Write command	-

Display

Mem	PARAM ErrBüErr 02
-----	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.4 Error Number 3

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B04h
Subindex	00h

Service protocol

Read command	J03
Write command	-

Display

Menu	PARAM ErrBuffErr 03
------	---------------------

Value range

Value	Display	Description
-		
no default		

5.10.5 Error Number 4

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B05h
Subindex	00h

Service protocol

Read command	J04
Write command	-

Display

Menu	PARAM ErrBuffErr 04
------	---------------------

Value range

Value	Display	Description
-		
no default		

5.10.6 Error Number 5

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B06h
Subindex	00h

Service protocol

Read command	J05
Write command	-

Display

Menu	PARAM ErrBüErr 05
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.7 Error Number 6

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B07h
Subindex	00h

Service protocol

Read command	J06
Write command	-

Display

Menu	PARAM ErrBüErr 06
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.8 Error Number 7

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B08h
Subindex	00h

Service protocol

Read command	J07
Write command	-

Display

Menu	PARAM ErrBüErr 07
------	-------------------

Value range

Value	Display	Description
-		
no default		

5.10.9 Error Number 8

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2B09h
Subindex	00h

Service protocol

Read command	J08
Write command	-

Display

Menu	PARAM ErrB࿾rr 08
------	-------------------------

Value range

Value	Display	Description
-		
no default		

5.10.10 Error Number 9

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2BOAh
Subindex	00h

Service protocol

Read command	J09
Write command	-

Display

Menu	PARAM ErrB࿾rr 09
------	-------------------------

Value range

Value	Display	Description
-		
no default		

5.10.11 Error Number 10

General characteristics

EEPROM	yes
Class	E
Unit	-

POWERLINK

Data type	UNSIGNED8
Access	ro
Object	2BOBh
Subindex	00h

Service protocol

Read command	J10
Write command	-

Display

Menu	PARAM ErrB&Err 10
------	-------------------

Value range

Value	Display	Description
-		
no default		

6 Service protocol

NOTICE	If there is process data exchange with a network master, writing parameters and execution of commands via the service protocol are prohibited. In this case, the drive replies with the error code "?03", no operation authorization
---------------	--

6.1 General Information

This service protocol enables parameterization and control of the drive by ASCII commands via an ASCII terminal

6.1.1 Communication

6.1.2 Settings

Available baud rates: 9.6kBit/s / 19.2kBit/s / 57.6kBit/s (factory setting) / 15.2kBit/s

Additional settings: no parity, 8 data bits, 1 stop bit, no handshake

6.1.3 ASCII commands

An ASCII command consists of an ASCII character and additional arguments such as parameter address, mathematical sign and value.

Length and format of an ASCII command are defined unchangeably

6.1.4 Responses

Except for a few cases, the actuator responds to ASCII commands with a terminating string (ASCII character ">" + Carriage Return "<CR>"). Responses to read commands contain return values in addition. Length and format of the response are defined by the command.

6.2 Commands

6.2.1 Start travel job

Command	Description	Chapter
M	Positioning mode: - start of positioning process to programmed set point Speed mode: - start of speed mode	6.6

6.2.2 Start of inching mode

Command	Description	Chapter
Y	only in positioning mode	6.6

6.2.3 Start inching mode 2 positive travel direction

Command	Description	Chapter
, (2Ch)	Drive travels in positive direction as long as the "," ASCII character is permanently sent (only in positioning mode).	6.6

6.2.4 Start inching mode 2 negative travel direction

Command	Description	Chapter
. (2E)	Drive travels in negative direction as long as the "." ASCII character is permanently sent (only in positioning mode)	6.6

6.2.5 Cancel current travel job in positioning mode

Command	Description	Chapter
I (49)	Motor remains in control state	6.6

6.2.6 Motor stop fast

NOTICE	If a contouring error is pending at the time of the "N" command, the motor will be enabled
---------------	--

Command	Description	Chapter
N	Motor decelerates with maximum delay. Motor remains in control state!	6.6

6.2.7 Motor stop

NOTICE	If a contouring error is pending at the time of the "O" command, the motor will be enabled
---------------	--

Command	Description	Chapter
O	Motor decelerates with programmed delay. Motor remains in control state!	6.6

6.2.8 Activate motor

Command	Description	Chapter
P	Motor is activated	6.6

6.2.9 Factory setting: all parameters

Command	Description	Chapter
S11100	Reset all parameters to factory settings	6.6

6.2.10 Factory setting: Standard parameter

Command	Description	Chapter
S11101	Reset only standard parameters to factory settings	6.6

6.2.11 Factory setting: Controller parameter

Command	Description	Chapter
S11102	Reset only controller parameters to factory settings	6.6

6.2.12 Factory setting: Visualization parameters

Command	Description	Chapter
S11003	Reset only visualization parameters to factory setting	6.6

6.2.13 Factory setting: Network parameters

Command	Description	Chapter
S11004	Reset only network parameters to factory setting	6.6

6.2.14 Acknowledge error

Command	Description	Chapter
S11103	Acknowledge active error	6.6

6.2.15 Calibrate

Command	Description	Chapter
S11104	Calibrate actuator	6.6

6.2.16 Delete error memory

Command	Description	Chapter
S11105	Deleting of the error memory	6.6

6.2.17 Software reset

Command	Description	Chapter
K	Execute software reset	6.6

6.3 Flow charts

6.3.1 Flow chart: Operating mode: Positioning mode

The flow chart below shows the control of positioning in the positioning mode via service protocol (see chapter 6).

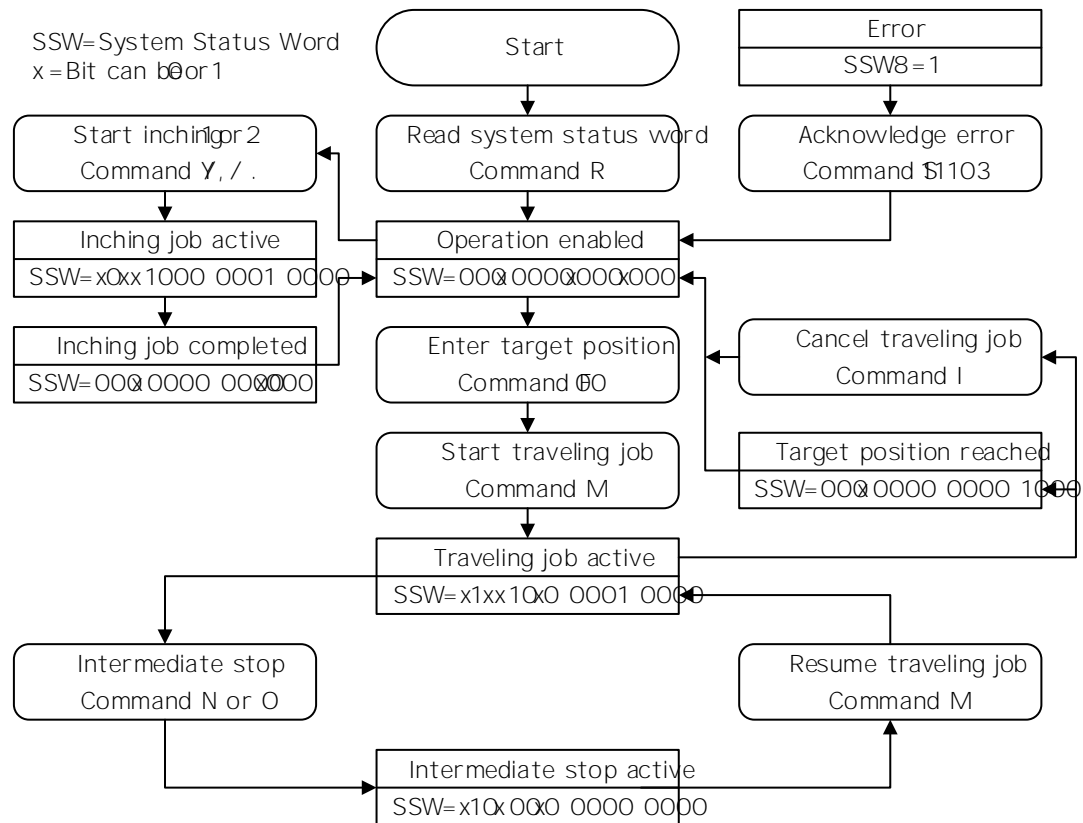


Fig. 18 Flowchart positioning mode

6.3.2 Flow chart: Operating mode: Speed demo

The flow chart below illustrates the control in the rotational speed mode via service protocol (see chapter 6).

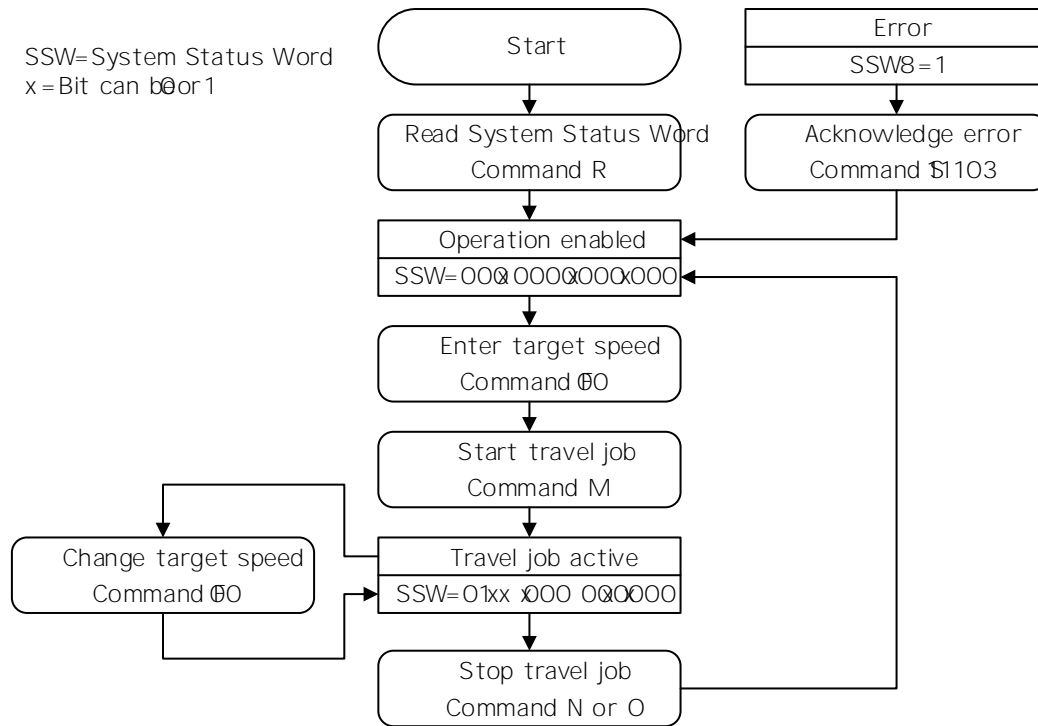


Fig. 19 Flow chart speed mode service protocol

6.4 Error number encoding

Faulty inputs are acknowledged with an error message. An error is always prefixed by a question mark, followed by a digit or error code. The error message ends with a carriage return "<CR>"

Code	Description
?01	Input of illegal parameter number
?02	Illegal value range
?03	No operating authorization (active access data exchange with network m)
?04	Input disabled due to operating state
?05	Limit switch 1 active
?06	Limit switch 2 active
?07	Actual or target value > upper software limit
?08	Actual or target value < lower software limit
?09	Setpoint entered exceeds limiting value
?10	Error
?11	Active EEPROM write access
?12	Actual or target value < lower area limit
?13	Actual or target value > upper area limit
?14	Operating voltage of control missing

6.5 Examples

6.5.1 Write and read set point +500

Write command: F0+0000500 (10 characters)

Reply ><CR> (2 characters)

Read command: 000 (2 characters)

Reply +0000500><CR> (10 characters)

6.5.2 Start travel job

Command: M (1 character)

Reply ><CR> (2 characters)

6.6 ASCII command structure

Command	Length	Access	Reply	CR	Length	Description
Ay	2	read	xxxxxxx>	x	10	Device information (constant) y =address xxxxxxx string
Byyy	4	read	±xxxxxxx>	x	10	Device information (actual values) yyy =address ±xxxxxxx decimal value
Eyy	3	read	±xxxxxxx>	x	10	Read parameter (3-byte) yy =address ±xxxxxxx decimal value
Fyy±xxxxxx	11	write	>	x	2	Write parameter (11-byte) yy =address ±xxxxxxx decimal value
Gyyy	4	read	xxxxx>	x	7	Read parameter (4-byte) yyy =address xxxxx decimal value
Hyyyxxxx	9	write	>	x	2	Write parameter (9-byte) yyy =address xxxxx decimal value
I	1	write	>	x	2	Cancel current travel job in positioning mode
Jyy	3	read	0xhh>	x	6	Error memory yy =address hh =hexadecimal value
K	1	write	>	x	2	Software reset
Lx	2	write	>	x	2	Type of positioning x =decimal value
M	1	write	>	x	2	Start travel job

Command	Length	Access	Reply	CR	Length	Description
N	1	write	>	x	2	Motor stop fast
O	1	write	>	x	2	Motor stop
P	1	write	>	x	2	Activate motor
Q	1	read	0xhh>	x	6	Flagregister hh =hexadecimal value
R	1	read	0xhhll>	x	8	System status word hh =hexadecimal value Highbyte ll =hexadecimal value Lowbyte
Sxxxxx	6	write	>	x	2	System command xxxxx =code
Tx	2	write	>	x	2	Sense of rotation x =decimal value
Uxxxx	5	read	bbbb		4	Read parameter (byte) bbbb =binary value in the Bi Endianformat
V	1	read	±xxxx>	x	7	Actual rotational speed ±xxxx =decimal value with arithmetical sign
W	1	read	bbbb		4	Position value in binary form bbbb =binary value in the Bi Endian format
Xy	2	write	>	x	2	Operating mode y =decimal value
Y	1	write	>	x	2	Start of inching mode
Z	1	read	±xxxxxxxx>	x	10	Position value ±xxxxxxxx=decimal value
, (2Ch)	1	write			0	Start inching mode 2 positive travel direction
. (2Eh)	1	write			0	Start inching mode 2 negative travel direction

6.7 Commissioning aids

TheProTooDL programming software serves easy commissioning and analysis via the service protocol. The RS232 interface is connected via the AIF01 programming tool and the M12/RS232 cable adapter from the SIKO accessory program.

7 Block diagram

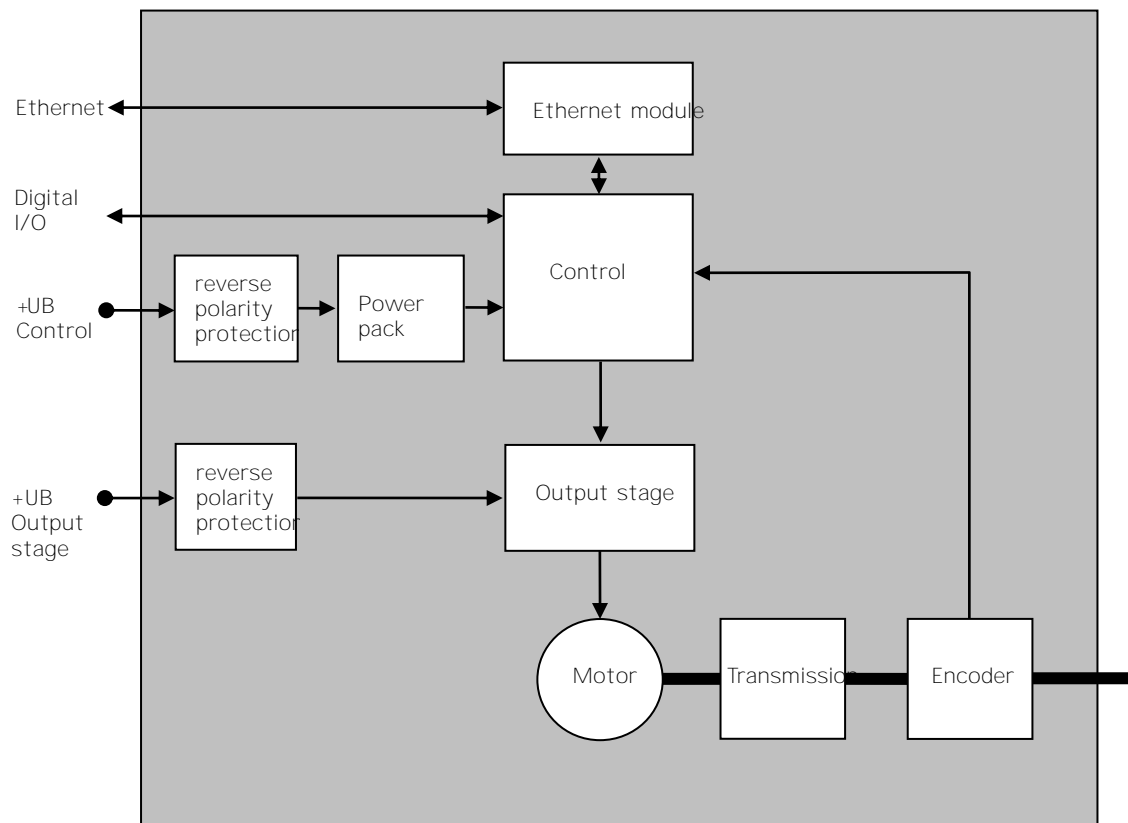


Fig. 20 Block diagram